

EUREKA



REFURBISHED
Lightweight
Vacuum Cleaner

Household Type

Owner's Guide
REF160S

IMPORTANT SAFEGUARDS

When using an electric appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

 
WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction. Some models contain a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup filter in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS


How to identify parts of your vacuum cleaner

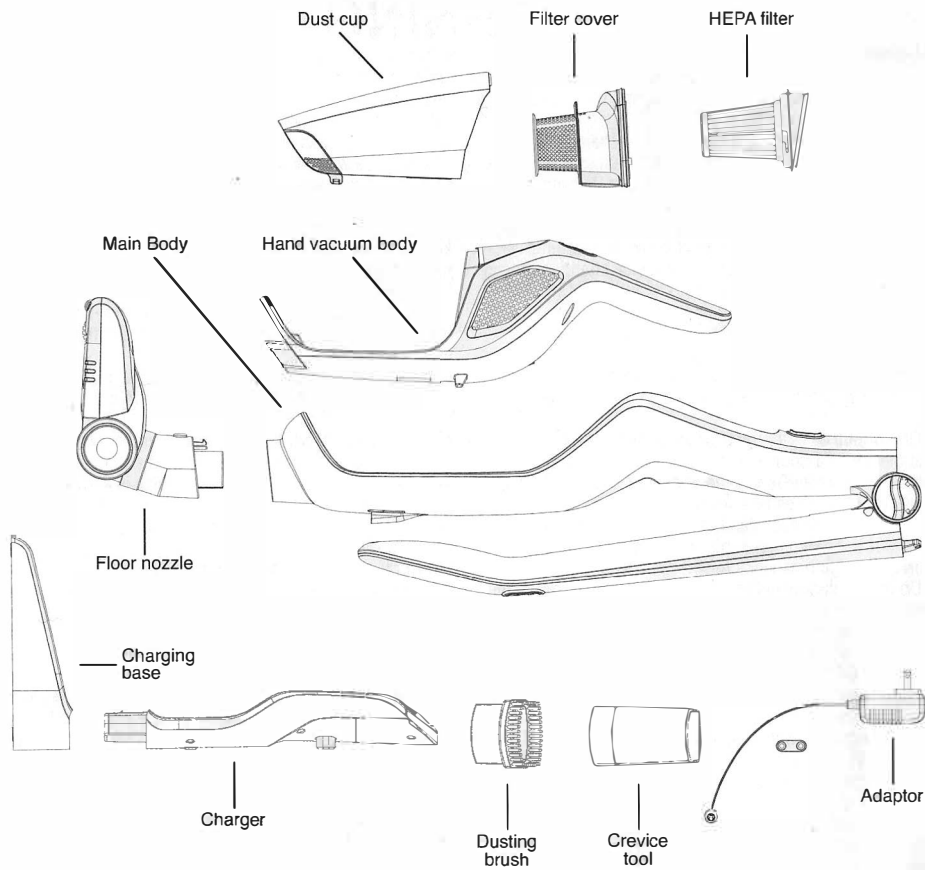


How to assemble your vacuum cleaner

The parts of your vacuum cleaner (main body, floor nozzle, charger, charging stand, adaptor, dusting brush and crevice tool) will be packed separately in the box. Follow the instructions below to assemble your vacuum cleaner:

 
1. Attach the floor nozzle onto the main body of the vacuum as shown. Flip up the handle to bring it to the upright position. To flip the handle back down, turn the dial to unlock.

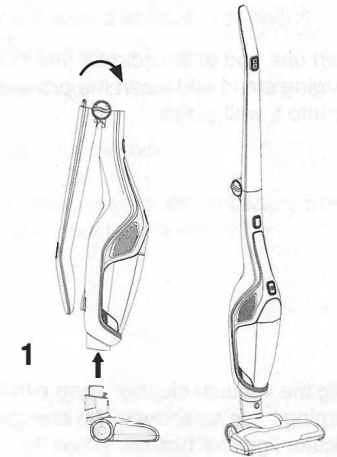

 2. Assemble the hand vacuum (dust cup, filters and hand vacuum body) and insert it into the main body of the vacuum cleaner.

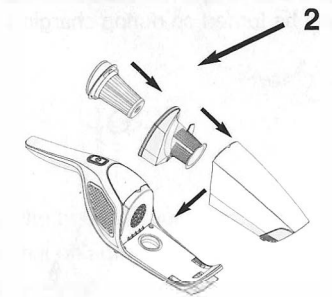


 3. Snap the charger into the charging base. The charging base can either stand freely or be screwed into a wall while on the floor.



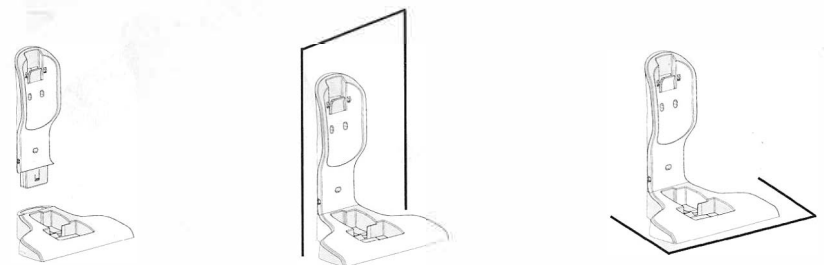


How to charge your vacuum cleaner

 1. Insert one end of the adaptor into the charging stand and insert the pronged end into a wall outlet.

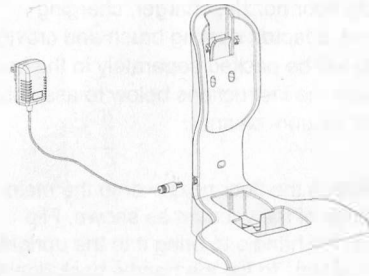

   
2. Bring the vacuum cleaner down into the charging base as shown. The charging indicator light will turn on. When the unit is fully charged all battery indicator lights will be lit up. The vacuum cleaner cannot be turned on during charging.

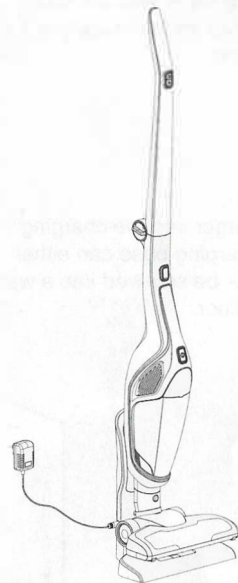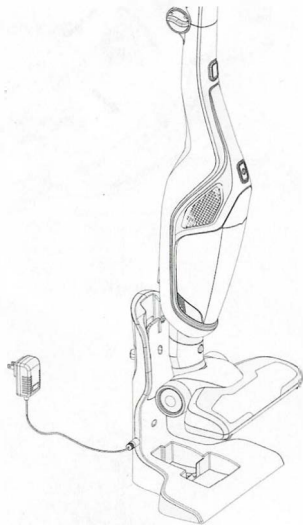

How to use your vacuum cleaner


1. The handle of the vacuum cleaner has two buttons: Power and Brush roll speed
 - a. Press the power button to turn on the vacuum cleaner
 - b. Press the brush roll speed button to either speed up the brush for carpets, or slow down the brush roll for hard floors.
 - c. Press the power button again to turn off the vacuum cleaner

 Note: The battery indicator lights on your vacuum cleaner will go down as battery power diminishes. When all lights go out the vacuum will automatically turn off.

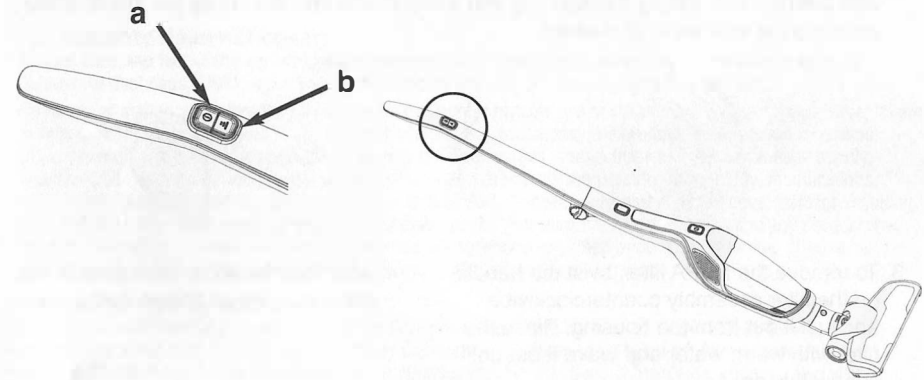


Using the hand vacuum

 1. Press the hand vacuum release button to remove the hand vacuum from the main body
2. Press the power button on the hand vacuum to turn it off and on
3. The dusting brush or the crevice tool can be used by snapping them on the suction inlet of the hand vacuum

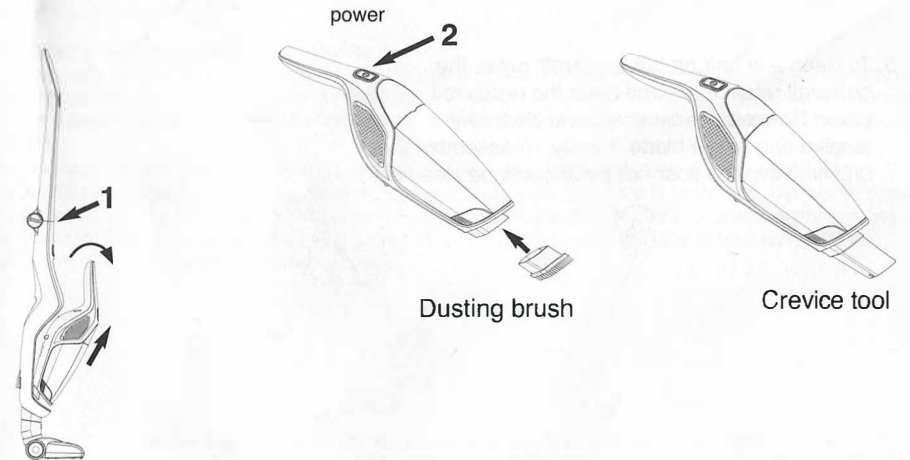

How to maintain your vacuum cleaner

 
1. The dust cup should be cleaned after each use for optimal performance. To empty the dust cup first remove the hand vacuum from the main body of the vacuum cleaner. Then press the left and right push buttons on the bottom of the dust cup and pull it away from the hand vacuum to remove it.

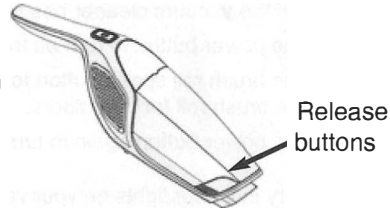


2. Remove the filter assembly from the dust cup by using the handle on top of the filter and pulling it out. Empty the dust cup into a receptacle and then rinse the inside of the dust cup out with water (if desired).



 
3. To remove the HEPA filter, twist the handle on the filter assembly counterclockwise and pull it out from the housing. Rinse the filter with warm water and leave it out until completely dry.



 4. After maintenance, re-assemble the hand vacuum as shown below.

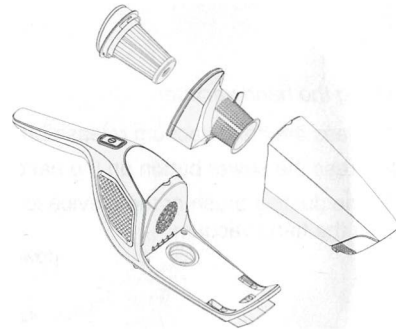

 5. To clean any hair on the brushroll, press the brushroll release tab and open the brush roll cover. Remove the brushroll and clear any tangled hair with a blade. Finally, re-assemble the brushroll into the floor nozzle to continue cleaning.

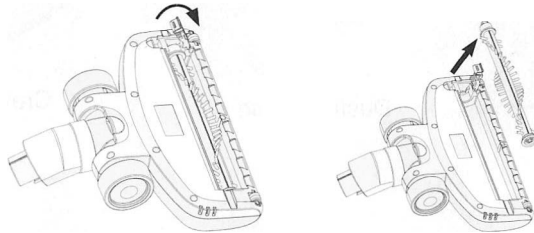

Problem solving

! Make sure vacuum cleaner is off and charging plug is unplugged.

NOTICE: Thermal cut-off

This vacuum cleaner has a special thermostat that protects the vacuum cleaner in case of motor overheating. **If the vacuum suddenly shuts off**, proceed as follows: 1) Check the vacuum for a possible source of overheating such as a full dust cup or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the vacuum. 2) After the **30 minute** period, press the power button. If the vacuum still does not work, call the Eureka Customer Service **HELPLINE** at **1-800-282-2886**.

Problem	Solution
Motor will not start	<ul style="list-style-type: none"> • Make sure cleaner is fully powered. • See detailed "thermal cut-off" instructions above.
Charging indicator lights are not lit while charging	<ul style="list-style-type: none"> • Push charger securely into electrical outlet, try another outlet or check circuit breaker. • Make sure charging plug is securely inserted into charging stand. • Indicator lights stop blinking when fully charged.
Not enough suction power	<ul style="list-style-type: none"> • Empty dust cup and clean or change filter. See page 8 for maintenance instructions. • Make sure cleaner is fully powered. Charge battery. • Remove clogs that restrict the airflow.
Not enough running time	<ul style="list-style-type: none"> • Make sure cleaner is fully powered. • Charge battery for 4 hours before using.
Brushroll will not turn	<ul style="list-style-type: none"> • Check brushroll for debris. See page 8 for maintenance instructions.

Discarding the vacuum and battery pack

Before you discard this vacuum, dispose of battery in an environmentally safe manner. Do not discard battery with your regular household trash.

Important battery disposal information.






 



To find a disposal location nearest you, call **1-800-822-8837**.

To preserve natural resources, please recycle or dispose of expired battery pack properly. This product contains a lithium-ion battery. It must be disposed of properly. Local laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.





Order genuine Eureka accessories and replacement parts

Image	Part name	Part #
	Dust cup	DL0001
	Filter cover	DL0002
	HEPA filter	DL0003
	Floor Nozzle	DL0004
	Charging base	DL0005
	Charger	DL0006
	Dusting brush	DL0007
	Crevice Tool	DL0008
	Adaptor	DL0009



AMERICA'S REMANUFACTURING COMPANY 90-DAY LIMITED WARRANTY

Return the product to the retail location where it was purchased. A new or reconditioned unit will be provided. The exchange unit is warranted for the remainder of your product's original warranty period.

If you have problems returning the product to the store from which it was purchased, contact ARC Customer Service via email at warranty@arcaugusta.com or support@arcaugusta.com. You should attempt to return the unit prior to emailing the email address above.

Products remanufactured by America's Remanufacturing Company have a ninety-day limited "return to vendor" (RTV) warranty. This product is warranted against failure due to a defect in materials or workmanship for a period of ninety days from the date of original purchase. Proof of the original purchase date is needed to make a warranty claim. We recommend you register your purchase by visiting <https://www.arcaugusta.com/register-my-product.htm>.

This warranty is extended to the original purchaser owner only for products purchased for home use within the USA. Should a defect occur, the ARC will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor.

Returning Your Unit to ARC:

1. Properly pack your unit. We recommend using the original carton and packing materials.
2. Include in the package a copy of the sales receipt or other evidence of the date of original purchase. Print your name and address and a description of the defect.
3. Write the RMA number provided on the outside of the package.
4. Ship to the address provided by ARC.

What Your Warranty Does Not Cover:

- Improper installation.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Products with original serial numbers that have been removed, altered or cannot be readily determined.
- Rust on the interior or exterior of the unit.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- Batteries.
- Costs for removal and or installation of the unit for repair.
- Cosmetic defects.

Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Exclusion of implied warranties: Except where prohibited or restricted by law, there are no warranties, whether express, oral or statutory which extend beyond the description on the face hereof, including specifically the implied warranties of merchantability or fitness for a particular purpose.

The warranty coverage may change from time to time. The most up to date version of the ARC Limited Warranty is available online at www.arcaugusta.com/consumer-warranty.htm.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

GENERAL INFORMATION

Use the cleaner to pick up dirt and dust particles. Avoid picking up hard or sharp objects that could damage the vacuum cleaner.

DO NOT OIL the motor or the brush roll. The motor and brush roll are permanently sealed and lubricated.