



VERSA CORDLESS 3-IN-1 STICK REFURBISHED VACUUM

REFURBISHED USER MANUAL

IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for Household use only.



IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

WARNING: WHEN USING AN ELECTRICAL PRODUCT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO AVOID ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY, INCLUDING THE FOLLOWING:

- Fully assemble product prior to use.
- Do not use product or charger outdoors or on wet surfaces.
- Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual.
- Use only manufacturer's recommended attachments.
- Do not use charger with damaged cord or plug. If product or charger is not working as it should, has been dropped, damaged, left outdoors, or dropped into water.
- Do not pull or carry charger by cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger, plug, or charger terminals with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the products from falling, always place product at bottom of stairs or on floor. Do not place product on stairs or furniture.
- Put product away after use to prevent tripping accidents.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters, separator and dirt cup in place.

WARNING: RISK OF FIRE, PROPERTY DAMAGE, AND INJURY. NEVER EXPOSE YOUR BATTERY PACK OR CHARGER TO WATER, MOISTURE, OR FLUIDS, INCLUDING BUT NOT LIMITED TO CORROSIVE OR CONDUCTIVE FLUIDS, OR ALLOW FLUIDS TO FLOW INSIDE THESE ITEMS.

Corrosive or conductive fluids, such as salt water, chlorine, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit in the battery pack. If your battery pack is exposed to a corrosive or conductive fluid, do not attempt to use or charge the battery pack and immediately perform the following steps:

- Wear appropriate personal protective equipment, including eye protection and rubber gloves.
- Place your exposed battery pack in a large bucket, such as a 5 gallon or similar bucket, and fill the bucket with regular tap water. Do not place more than two packs in the bucket.
- Locate the bucket outdoors in an area inaccessible to children and pets and away from all buildings, garages/sheds, structures, vehicles, and combustible/flammable materials.
- Leave the battery pack(s) in the bucket filled with tap water and visit www.refurbproductsupport.com for additional instructions on the proper disposal of the exposed battery pack(s).
- Prevent unintentional starting. Ensure the switch is in the off-position before (connecting to battery pack,) picking up or carrying the product. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Disconnect the battery pack before making any adjustments, changing accessories or storing product. Such preventative measure reduce the risk of starting the product accidentally.
- For use with Dirt Devil charger model YLA0205B-T182036 or part number: 440013094. A charger that is suitable for one type of battery pack may create a risk of injury and fire when used with another battery pack.
- Use products only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperatures. Exposure to fire or temperature above 265 °F/130 °C may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Unplug from electrical outlet when not in use and before cleaning, or servicing the appliance.
- Do not modify or attempt to repair the appliance (or the battery pack) except as indicated in the instructions for use and care.
- This product contains no serviceable parts.

Visit www.refurbproductsupport.com.

CAUTION:

TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

BATTERY DISPOSAL WARNING – RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL

LITHIUM-ION BATTERIES

The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion [Li-ion] battery indicated Techtronic Industries, a corporate affiliate of HOOVER, Inc., is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area. Please visit www.rbrc.org/call2recycle/ for information on Li-ion battery recycling and disposal bans/restrictions in your area. HOOVER's involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.



NOTICE:

A THERMAL PROTECTOR HAS BEEN DESIGNED INTO YOUR CLEANER TO PROTECT IT FROM OVERHEATING. WHEN THE THERMAL PROTECTOR ACTIVATES THE CLEANER WILL STOP RUNNING.

If this happens proceed as follows:





1. Turn cleaner OFF.
2. Empty dirt cup.
3. Inspect the nozzle opening, dirt cup inlet and filter. Clear obstructions if present.
4. When cleaner is turned off and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

QUICK START

ASSEMBLY

Fully assemble product prior to use.

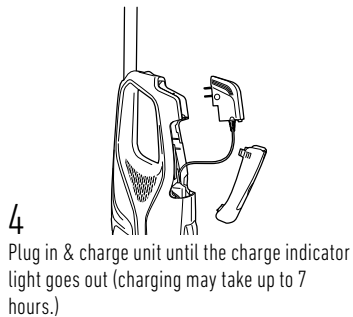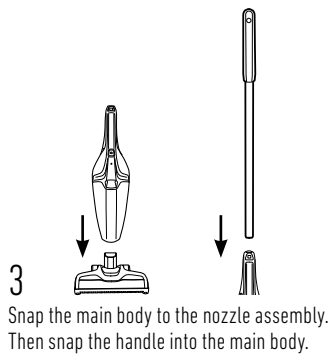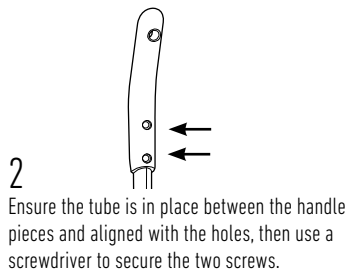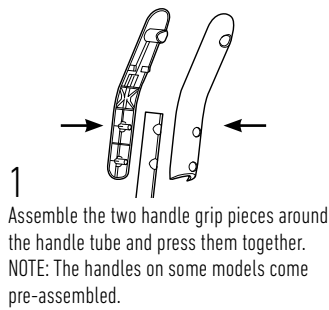

TIP

For best performance fully charge the product before first use.

LED Illumination

Slow Blink = Charging

(Indicator will blink slowly when charging)



Fast Blink = Error

(15 seconds duration for error code)





OPERATION

HOW TO USE

CAUTION: Not to be used for grooming a pet.




Press the standby button to turn the machine on.

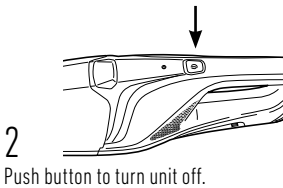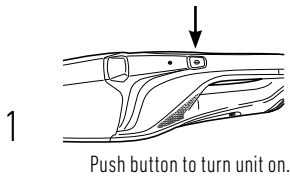

NOTE: If unit shuts off during use, turn the unit off and check for obstruction of the brushroll & clear if obstruction is found. Then turn the unit back on.

CHARGING

NOTE: Use only the charger supplied by the manufacture to recharge.

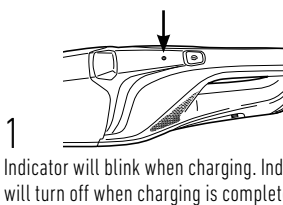



NOTE: THE CHARGER WILL BE WARM WHILE CHARGING.

NOTE: THE UNIT WILL CHARGE ONLY FOR AS LONG AS NEEDED. IT MAY TAKE UP TO 7 HOURS FOR FULL CHARGE.

TIP

For best performance fully charge the product before first use.



HOW TO USE AS A HAND VAC

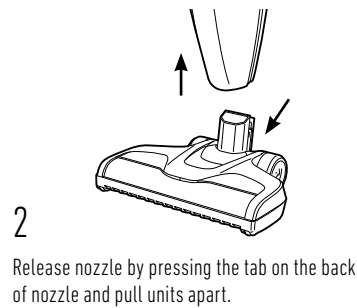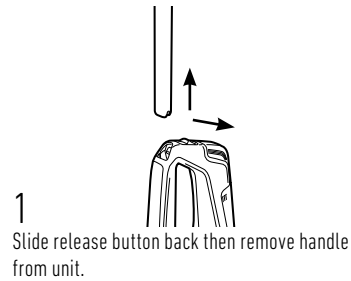


MAINTENANCE

HOW TO EMPTY DIRT CUP AND REMOVE FILTER

WARNING: To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

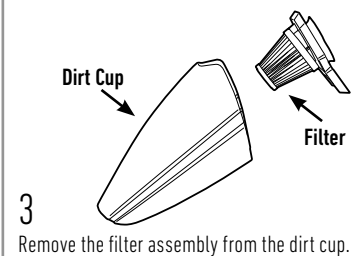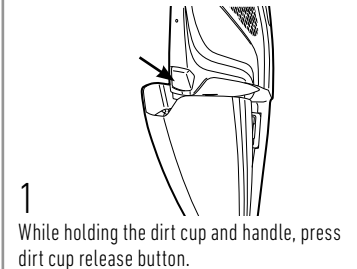

NOTE: Do not discard filter or filter adapter.

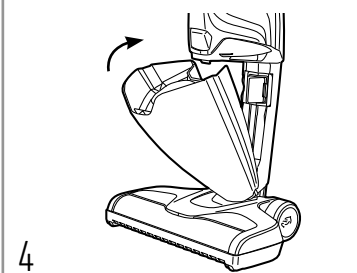

Put the filter back into the dirt cup, align bottom first and rotate up until it clicks.

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry.


TIP

To maintain performance, filter should be changed every 3-6 months, or as needed.


MAINTENANCE

FILTER REMOVAL & REPLACEMENT


WARNING: To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

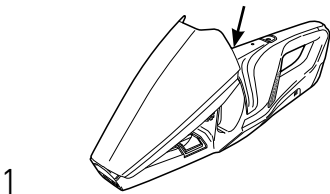

1
Depress the dirt cup release button where it says filter.

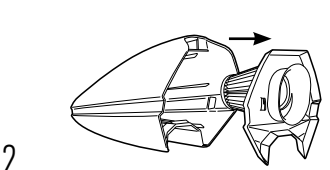


2
Hold dirt cup over a wastebasket. Grasp filter and gently pull out filter basket.

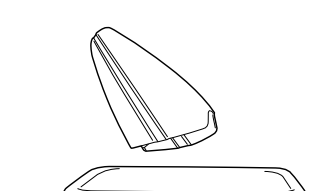


3
Shake dirt and debris out of dirt cup.


CLEAN AND RINSE FILTER

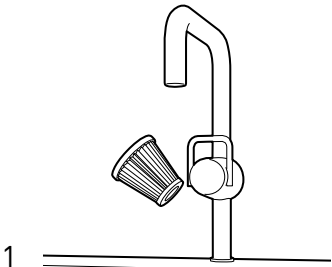

1
Hold filter under running water to rinse. Do not use soap/detergent. Allow filter to completely dry for a t least 24 hours before replacing in dirt cup.

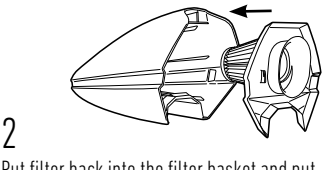


2
Put filter back into the filter basket and put filter basket back into dirt cup.

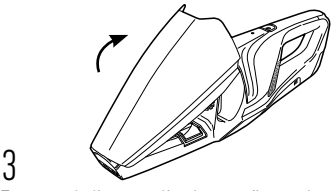


3
To reattach dirt cup: align bottom first and pivot dirt cup until it snaps into place.


HOW TO ACCESS CHARGER

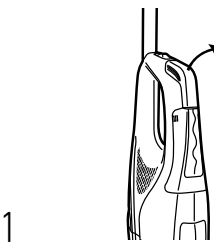


1
Grip the charger at the top near the ridges & pivot towards the rear/bottom of the unit.

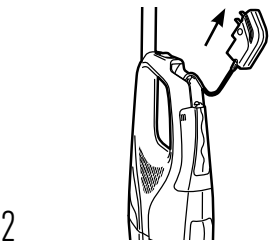

2
Then pull the charger away from the unit & plug into the wall outlet to charge.

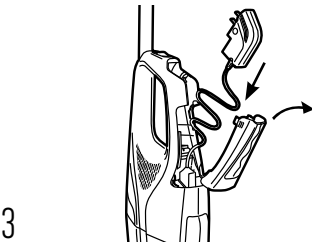

3
To store the charger, grip & squeeze the access door & pivot away from the unit. Then bundle the cord in the unit & replace the access door.

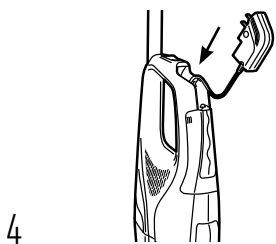

4
Finally place the charger in place insuring the bottom of the charger engages on the posts near the access door & then pivot the charger in place.

TROUBLESHOOTING

WARNING: To reduce the risk of personal injury - Turn off before cleaning or servicing.

IF APPLIANCE IS NOT WORKING AS IT SHOULD, HAS BEEN DROPPED, DAMAGED, LEFT OUTDOORS, OR DROPPED INTO WATER, VISIT WWW.REFURBPRODUCTSUPPORT.COM PRIOR TO CONTINUING USE. UNPLUG FROM ELECTRICAL OUTLET WHEN NOT IN USE AND BEFORE CLEANING, MAINTAINING OR SERVICING THE APPLIANCE. THIS PRODUCT CONTAINS NO SERVICEABLE PARTS.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Battery not charged. 2. Battery dead - won't hold charge. 3. If the brushroll is jammed the unit's circuit production will be enabled & the unit will shut off.	1. Ensure unit is in the off position before charging. The indicator light will turn on while unit is charging, and light turns off when fully charged. Charge Battery up to 7 hours. 2. Visit our website at www.refurbproductsupport.com 3. Make sure unit is switched to Off & remove any obstruction from the brushroll & restart. 4. Visit our website at www.refurbproductsupport.com
Cleaner won't pick up or low suction	1. Dirt Cup not installed correctly. 2. Dirt Cup is full. 3. Battery charge is getting weak. 4. Filter is dirty. 5. Clogged filter. 6. Nozzle/dirt passage clogged. 7. Filter/Filter Frame missing. 8. Brushroll not properly assembled.	1. Review Filter Removal & Replacement. 2. Empty dirt cup. 3. Charge battery. 4. Clean or replace filter. 5. Remove filter and clean. 6. Turn off the unit and then disconnect the nozzle to replace the debris. 7. Visit our website at www.refurbproductsupport.com 8. Check & insure brush roll is properly installed.
Dust escaping from cleaner	1. Dirt cup is full. 2. Dirt cup not installed correctly. 3. Filter not installed correctly.	1. Turn off unit and remove debris. 2. Review Filter Removal & Replacement. 3. Review Filter Removal & Replacement
Charger indicator flashes then goes out	1. Problem with the charging circuit.	1. Visit our website www.refurbproductsupport.com