



Quick Flip™

Lithium Cordless Refurbished Hand Vac

1-2-3...

REFURBISHED USER MANUAL

REPLACEMENT PARTS
• FILTER: **F105**

ID# 96152010, INSTRUCTION MANUAL, 8030010, A.1
©2016 Technic Floor Care Technology Limited.
All Rights Reserved. Distributed by Royal Appliance Mfg. Co.
Orem, UT 84057

LET'S GO.™

HI. WELCOME.

Congrats on purchasing your Refurbished Dirt Devil Hand Vac. Inside, you'll find everything you want to know from the tools to how to.

So what are you waiting for? LET'S GO.™

This product uses the following parts:
FILTER _____ **F105**

TABLE OF CONTENTS

1-2-3...
Quick Start Assembly _____ **7**
How to _____ **8**

Tools _____ **9**
Charging _____ **9**
Filter Removal and Replacement _____ **10**

Troubleshooting _____ **11**

⚠ WARNING ⚠

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use the unit, store, or charge battery outdoors or on wet surfaces. Do not allow to get wet.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use charger with damaged cord or plug. If appliance or charger is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry charger by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger, including charger plug, and charger terminals with wet hands.
- Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and/or dirt cup in place.
- WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. **WASH HANDS AFTER USING.**
- Do not incinerate the charger, battery, or appliance even if it is severely damaged. The batteries can explode in a fire.
- This product includes rechargeable lithium-ion batteries. Do not expose batteries to high temperatures, as they may catch fire and/or explode.
- Do not expose battery to crushing, incineration or similar actions.

- Do not dispose of battery in a fire or trash compactor. See battery disposal section for directions.
- Do not attempt to disassemble battery.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin wash quickly with soap and water. If any liquid gets into the eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.
- Use only the charger specified to recharge.
- Do not attempt to short circuit the battery or charger terminals.
- The charger is for indoor use only. Be sure to always keep the battery and charger in a dry place.
- Put product away after use to prevent tripping accidents.
- CAUTION:** Not to be used for grooming a pet.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

SAVE THESE INSTRUCTIONS

BATTERY DISPOSAL WARNING:
RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL.
1-800-822-8337

CAUTION: The battery used in this device may present a risk of fire or chemical burn if misused. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate. Dispose of battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

LITHIUM-ION BATTERIES
The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicated Technic Industries, a corporate affiliate of Dirt Devil, is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area. Please visit www.rbrc.org/call2recycle/ for information on Li-ion battery recycling and disposal bans/restrictions in your area. Dirt Devil, involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

QUICK START

1
REMOVE FROM CARTON & REVIEW THE INSTRUCTION MANUAL.

2
PLUG IN & CHARGE UNIT UNTIL THE CHARGE INDICATOR LIGHT GOES OUT (CHARGING MAY TAKE UP TO 6 HOURS).

YOUR HAND VAC IS READY TO CLEAN!
LET'S GO.™



NEED HELP?
Go to www.refurbproductsupport.com

TOOLS

QUICK FLIP™ CREVICE TOOL

Easily clean cracks and crevices.

1. Flip the crevice tool out and push in to clean cracks and crevices.

2. To store crevice tool: gently pull the tool away from the dust cup and flip the tool up toward the unit & press down until you feel it lock into place.

CHARGING

NOTE: Use only the charger supplied by the manufacturer to recharge.
TIP: For a better experience, fully charge the unit before first use.

1. Power switch must be in the OFF position.
NOTE: The unit can only charge when the switch is in the OFF position.
NOTE: If the unit is running and the charger plug is connected to the unit, the unit will shut off to prevent damage to the charger or unit.

2. The charge indicator light will pulse when charging and the indicator will turn off when charging is complete.
NOTE: The charge indicator will only turn on while charging. The charger will be warm while charging.
NOTE: The unit will charge only for as long as needed. It may take up to 6 hours for full charge.

FILTER REMOVAL AND REPLACEMENT

TIP: To maintain performance, filter should be changed every 3-6 months, or as needed.

1. While holding the dirt cup and handle, press dirt cup release button.

2. Remove the dirt cup to access filter.

3. Remove filter assembly from dirt cup & separate the white filter from the filter housing. Tap filter over a trash can to remove debris. Be sure to also wipe debris from the filter housing.
NOTE: Do not discard filter or filter housing.

4. Put the filter back into the filter housing and place filter assembly back into the dirt cup. Reassemble dirt cup to body, align bottom first and rotate up until it clicks.

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry. **LUBRICATION** The motor is equipped with bearings which contains sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor.

WARNING
To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

TROUBLESHOOTING

Any other servicing should be done by an authorized service representative. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Battery not charged.	1. Charge battery up to 6 hours. The indicator light will pulse until the battery is fully charged and then will turn off.
	2. Battery dead - won't hold charge.	2. Visit our website at www.refurbproductsupport.com
	3. Needs service.	3. Visit our website at www.refurbproductsupport.com
Cleaner won't pick up or low suction	1. Dirt Cup not installed correctly.	1. Review Filter Removal & Replacement
	2. Dirt Cup is full.	2. Empty dirt cup.
	3. Battery charge is getting weak.	3. Charge battery.
	4. Filter is dirty.	4. Clean or replace filter.
	5. Clogged filter.	5. Remove filter and clean.
	6. Nozzle/dirt passage clogged.	6. Turn off the unit and then disconnect the nozzle to remove debris.
	7. Filter/Filter Frame missing.	7. Visit our website www.refurbproductsupport.com
Dust escaping from cleaner	1. Dirt cup is full.	1. Turn off unit and remove debris.
	2. Dirt cup not installed correctly.	2. Review Filter Removal & Replacement
	3. Filter not installed correctly.	3. Review Filter Removal & Replacement
Charger indicator flashes then goes out	1. Problem with the charging circuit.	1. Visit our website www.refurbproductsupport.com

LED Illumination

Slow Pulse = Charging
(Continuous during charge cycle)

Fast Blink = Error
(15 seconds duration for error code)

HOW TO USE

1. Slide the power switch to the ON position.

2. After cleaning, slide the power switch to the OFF position.
NOTE: Empty dirt cup after each use or until full. Check the filter to see if it needs cleaned. Refer to page #10 for filter details.
TIP: The power switch must be in the OFF position for the unit to charge.

CAUTION
Not to be used for grooming a pet.