



CLOVER
RETURNS MANAGEMENT
SOLUTIONS

BH53605V CERTIFIED-REFURBISHED USER MANUAL

Important Information About Your Refurbished Product

Notice to Customers: This product has been refurbished by Clover Environmental Solutions, LLC dba Clover Returns Management Solutions. We are committed to providing high-quality refurbished household products to meet your needs.

Terms and Conditions: Any terms and conditions set forth in the attached original OEM documentation may not apply to this remanufactured item. For the specific terms applicable to your purchase, please refer to the documentation provided at the time of purchase or visit www.refurbproductsupport.com

Additional Information:

- **Safety Notice:** Ensure you follow all safety instructions provided in the OEM documentation as they remain applicable to the safe operation of this remanufactured product.
- **Recycling and Disposal:** For information on proper disposal or recycling of this product please visit the manufacturer's website.

Contact Us: If you have any questions or concerns about your refurbished product, please reach out to us via:

Website: www.refurbproductsupport.com

Email: productsupport@cloveres.com

Phone: (844) 745-0760

This cover sheet is being provided to ensure clarity regarding the status and support of your refurbished product. The attached OEM documentation is provided for reference only.



EMERGE

CORDLESS VACUUM

Refrubished User Manual

MODEL: BH53600, BH53600V(DI), BH53640VCD,

BH53641VDE, BH53642VDE



IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for Household use only..

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

WARNING: WHEN USING AN ELECTRICAL PRODUCT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO AVOID ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY, INCLUDING THE FOLLOWING:

- Fully assemble product prior to use.
- Do not use charger outdoors.
- Do not use product on wet surfaces. Do not expose to rain. Store Indoors.
- Do not store or charge battery outdoors or on wet surfaces. Do not allow to get wet.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this user manual. Use only HOOVER® recommended attachments and parts.
- Do not use charger with damaged cord or plug.
- Do not pull or carry charger by cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger, plug, or charger terminals with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts

of body away from openings and moving parts.

- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the products from falling, always place product at bottom of stairs or on floor. Do not place product on stairs or furniture.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters, separator and dirt cup in place.
- Put product away after use to prevent tripping accidents.

WARNING: RISK OF FIRE, PROPERTY DAMAGE, AND INJURY. NEVER EXPOSE YOUR BATTERY PACK, CHARGER, OR UNIT TO WATER, MOISTURE, OR FLUIDS, INCLUDING BUT NOT LIMITED TO CORROSIVE OR CONDUCTIVE FLUIDS, OR ALLOW FLUIDS TO FLOW INSIDE THESE ITEMS.

Corrosive or conductive fluids, such as salt water, chlorine, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit in the battery pack. If your battery pack is exposed to a corrosive or conductive fluid, do not attempt to use or charge the battery pack and immediately perform the following steps:

- Wear appropriate personal protective equipment, including eye protection and rubber gloves.
- Place your exposed battery pack in a large bucket, such as a 5 gallon or similar bucket, and fill the bucket with regular tap water. Do

not place more than two packs in the bucket.

- Locate the bucket outdoors in an area inaccessible to children and pets and away from all buildings, garages/sheds, structures, vehicles, and combustible/flammable materials.

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the product. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Disconnect the battery pack before making any adjustments, changing accessories or storing product. Such preventative measure reduce the risk of starting the product accidentally.
- Recharge only with the HOOVER® charger. A charger that is suitable for one type of battery pack may create a risk of injury and fire when used with another battery pack.
- Use products only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperatures. Exposure to fire or temperature above 265°F/130°C may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- This product contains no serviceable parts.
- Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Do not allow nozzle with brush roll running to sit in one location for an extended period of time, as damage to floor can result.
- Brush roll continues to turn while product is turned on and handle is in upright position. To avoid damage to carpet, rugs, and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.

DO NOT RETURN TO STORE

Contact
RefurbProductSupport.com
for assistance with your
vacuum.

CHARGING YOUR PRODUCT

- 1 Plug in the charger, then attach the battery pack to the charger by aligning the ribs on the battery pack to the grooves in the charger.

- 2 Slide the battery pack into the charger.

NOTE: The lights on the battery will show the state of charge. If the light on the charger flashes red, there is an error with the battery or the charger. If this occurs, disconnect and reconnect the battery or call customer service for support. Once charge is complete, lights on the battery and charger will turn off.

- 3 To remove the battery pack, press the latches and pull up.

NOTE: During charging, the pack and ambient temperature should be between 41 to 86° F (5 and 30° C). The charger will sense if the pack, or ambient temperature, is too cold or too hot, and will return an error code (red LED will be on) and not charge the pack.

ASSEMBLY

Fully assemble product prior to use.

- 1 Fit the dirt cup onto the hooks, then rock it up into the handheld so it secures into place.

- 2 Push the reach wand down onto the powered nozzle until it clicks into place.

- 3 Push the handheld down onto the reach wand until it clicks into place.

NOTE: Fully charge battery before first use. This will take 3-4 hours. Due to federal regulations, the battery does not come fully charged.

STORING YOUR VACUUM

- 1 Choose the desired location, then place the mount on the wall at the desired height. Mark the wall anchor locations. Install the anchors and screw the mount to the wall.

- 2 Store the vacuum by firmly pressing the product into the wall mount to secure.

NOTE: Accessories can be stored by sliding them onto the top and bottom of the wall mount.

- 3 Slide the battery pack into the charger.

OPERATION

CAUTION: Put product away after use to prevent tripping accidents.

CAUTION: Not to be used for grooming a pet.

USING YOUR PRODUCT

- 1
 - ON/OFF power button.
 - Unit turns on in Default mode.
 - • To increase runtime for hard floors and everyday messes.
 - + • To increase suction for more embedded messes.
 - • Battery LED is illuminated WHITE when on and RED when battery is low.

NOTE: Pressing the — or + will increase or decrease the power level from where it is currently running.

HANDHELD MODE

WARNING: To avoid serious personal injury, always remove the battery pack from the product when connecting or disconnecting accessories.

- 1 Press the release button on attachment and pull to separate.
- 2 Push the chosen accessory into the handheld until it clicks into place.

CLEANING UP HIGH

WARNING: To avoid serious personal injury, always remove the battery pack from the product when connecting or disconnecting accessories.

- 1 Press the release button on attachment and pull to separate.
- 2 Push the accessory into the reach wand until it clicks into place.

CAUTION: To avoid injury, particularly to face and head, keep hair, loose clothing, fingers and all parts of the body away from revolving brush.

MAINTENANCE

WARNING: To reduce the risk of personal injury - Turn power switch off and remove battery before cleaning or servicing.

This product contains no serviceable parts.

Store the battery pack where the temperature is below 80° F and away from moisture.

GENERAL MAINTENANCE

 
IMPORTANT: Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use a clean cloth to remove dirt, dust, oil, grease, etc.

LUBRICATION: The motor and brush roll are equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor or brushroll.

EMPTYING THE DIRT CUP


1

Remove the battery pack.



2

 Press button to release the dirt cup.

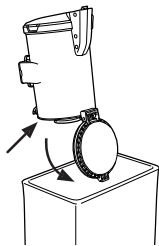


3

Hold the dirt cup over a trash bin and press the dirt cup release button to empty. Close the dirt cup, then replace it by rocking it back into place.

CLEANING THE FILTER AND CYCLONE



1

 Pull open the lid of the dirt cup to access the filter.

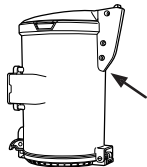

2

  To clean the cyclone, lift to remove. Clean dirt and debris.

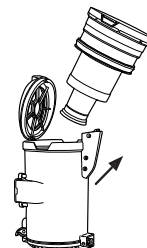


3

Pull the filter away and tap to remove dirt. Rinse filter under warm water until water is clear. Allow filter to dry for 24 hours before reinserting.

IMPORTANT: Do not use vacuum without the filter or cyclone in place. Do not use soap or other chemicals to clean. Dry filter completely, for up to 24 hours, before reinstalling into the product.

4

 Install the dirt cup filter cover before reattaching the dirt cup.

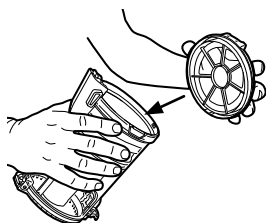


REMOVING AND REPLACING THE BRUSH ROLL

WARNING: Risk of personal injury - Brush roll may suddenly restart. Turn power switch off and remove battery before cleaning or servicing.

WARNING: To reduce the risk of injury from moving parts - Remove Battery before Servicing.


1

 Remove the powered nozzle from reach wand. Using your fingers or a coin, push and turn the brush roll lock counter-clockwise to release the brushroll.

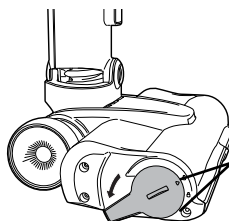


2

 Pull the brushroll out of the nozzle with pull tab.

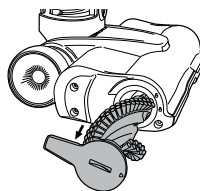


3

 To remove any threads or hair, cut along the groove of the brushroll.

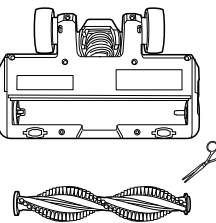


4

 Clear any dirt/debris from the end caps inside of the housing of the powered nozzle.

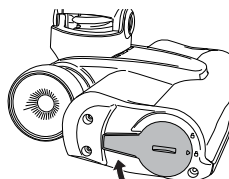

5

 Re-fit the brushroll into the housing and turn the brush roll lock clockwise to lock.



THERMAL PROTECTOR: A THERMAL PROTECTOR HAS BEEN DESIGNED INTO YOUR CLEANER TO PROTECT IT FROM OVERHEATING. WHEN THE THERMAL PROTECTOR ACTIVATES THE CLEANER WILL STOP RUNNING.

If this happens proceed as follows:

1. Turn cleaner OFF and remove battery pack.
IMPORTANT: If left turned on, the cleaner motor may restart unexpectedly.
2. Empty dirt cup.
3. Inspect the filter and cyclone for any obstructions. Clear obstructions if present.
4. After the battery pack is removed and the motor cools for 30 minutes, reinstall the battery pack. The thermal protector will deactivate and cleaning may continue.

If thermal protector continues to activate after following the above steps, your cleaner needs servicing.

TROUBLESHOOTING

WARNING: TO REDUCE THE RISK OF PERSONAL INJURY - TURN POWER SWITCH OFF AND REMOVE THE BATTERY BEFORE CLEANING OR SERVICING.

THIS PRODUCT CONTAINS NO SERVICEABLE PARTS.

SEE BEHIND THE BATTERY DOCK ON THE PRODUCT FOR MODEL NUMBER.

ACCESSORIES

EVERY ONEPWR® BATTERY WORKS WITH EVERY ONEPWR® PRODUCT.		PARTS AND ACCESSORIES:	
BATTERY:	MODEL #	Charger	BH05000
2.0 Ah	BH15020, BH19020V	Dual Bay Charger	BH05200
3.0 Ah	BH15030, BH25030	0.5A Compact Charger	440014514
4.0 Ah	BH15240, BH25040, BH19240V, BH29040V	1.5A Compact Charger	440014513
8.0 Ah	BH25280, BH29280V	Fast Charger	BH05140
		Emerge Filter	AH48000
