



CLOVER
RETURNS MANAGEMENT
SOLUTIONS

FH4600V CERTIFIED-REFURBISHED USER MANUAL

Important Information About Your Refurbished Product

Notice to Customers: This product has been refurbished by Clover Environmental Solutions, LLC dba Clover Returns Management Solutions. We are committed to providing high-quality refurbished household products to meet your needs.

Terms and Conditions: Any terms and conditions set forth in the attached original OEM documentation may not apply to this remanufactured item. For the specific terms applicable to your purchase, please refer to the documentation provided at the time of purchase or visit www.refurbproductsupport.com

Additional Information:

- **Safety Notice:** Ensure you follow all safety instructions provided in the OEM documentation as they remain applicable to the safe operation of this remanufactured product.
- **Recycling and Disposal:** For information on proper disposal or recycling of this product please visit the manufacturer's website.

Contact Us: If you have any questions or concerns about your refurbished product, please reach out to us via:

Website: www.refurbproductsupport.com

Email: productsupport@cloveres.com

Phone: (844) 745-0760

This cover sheet is being provided to ensure clarity regarding the status and support of your refurbished product. The attached OEM documentation is provided for reference only.



STREAMLINE™

HARD FLOOR CLEANER

Refrubished User Manual

IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for Household use only.



IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

WARNING: WHEN USING AN ELECTRICAL PRODUCT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO AVOID ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY, INCLUDING THE FOLLOWING:

- Fully assemble product prior to use.
- Operate cleaner only at voltage specified on data plate on lower handle of cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Use indoors only. Do not immerse. Use only on surfaces moistened by the cleaning process.
- To Reduce the Risk of Fire and Electric Shock due to internal component damage, use only Hoover® Cleaning Fluids intended for use with this appliance. See the Cleaning Fluid section of this manual.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only Hoover's recommended attachments and products.
- Do not use product with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Connect to a properly grounded outlet only. See Grounding Instructions.
- Not intended for use on carpets.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without Tanks or Filters in place.
- Do not clean over floor electrical outlets.


CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Do not use sharp objects to clean out hose as they can cause damage.
- To assist in reducing drying time, be certain the area is well ventilated when using detergents and other cleaners with this machine.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.
- Water will drip from the brush roll and underside of the product after use and may

puddle. To avoid damage to wood and laminate flooring and to avoid potential slip hazard, after use (a) do not leave the product on wood and laminate surfaces and remove to a hard surface and (b) place unit on absorbent material (such as a towel) to soak up drips.

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an 1equipment-grounding conductor (C) and grounding plug (A). The plug must be inserted into an appropriate outlet (B) that is properly installed and grounded in accordance with all local codes and ordinances.

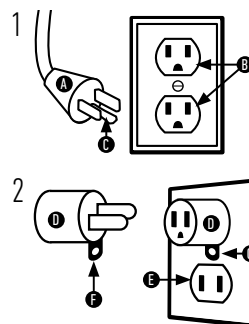

WARNING: IMPROPER CONNECTION OF THE EQUIPMENT-GROUNDING CONDUCTOR CAN RESULT IN THE RISK OF ELECTRIC SHOCK. CHECK WITH A QUALIFIED E ELECTRICIAN OR SERVICE PERSON IF YOU ARE IN DOUBT AS TO WHETHER THE OUTLET IS PROPERLY GROUNDED.

Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug (A) illustrated in Fig. 1. A temporary adapter (D) may be used to connect this plug to a 2-pole receptacle (E) if a properly grounded outlet is not available (Fig. 2). The temporary adapter should be used only until a properly grounded outlet (B) can be installed by a qualified electrician (Fig. 1). The green colored rigid ear, lug, or the like (F) extending from the adapter must be connected to a permanent ground (G) such as a properly grounded outlet box cover (Fig. 2). Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

CAUTION: To reduce the risk of injury from moving parts - Unplug before servicing. Do not use cleaner without brushes in place.

LUBRICATION: The motor is equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor bearings.

THERMAL PROTECTION

A thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates the cleaner will stop running. If this happens proceed as follows:


1. Turn cleaner OFF (and unplug from outlet).
2. Empty dirty water tank.
3. Inspect the nozzle for any obstructions. Clear obstructions if present.
4. When cleaner is de-energized and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

DO NOT RETURN TO STORE

Contact
RefurbProductSupport.com
for assistance with your
vacuum.

PRODUCT SET-UP

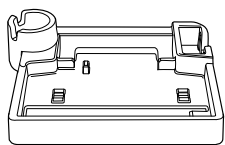

- 1 Place self-clean tray in storage area for placement of the unit after use. Ensure this is near an outlet to allow plug-in of the unit during self-clean process (Refer to Self-Cleaning Function section of manual.)




- 2 Attach handle onto body of the unit, proper installation will result in a clicking sound.

CORD STORAGE: Wrap the power cord around the cord hooks for convenient storage


FILLING THE SOLUTION TANK

WARNING: To reduce the risk of personal injury, unplug before cleaning or servicing. Do not use cleaner without tank in place.


IMPORTANT: Do not use solvent-based cleaning concentrates in your cleaner. Do not use any type of wax in your cleaner. Dry hands and plug cleaner into a properly grounded outlet.

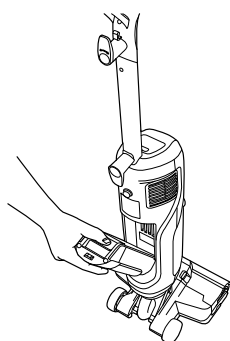

- 1 Remove the clean water tank from the back of the unit by pressing down the button and pulling out.

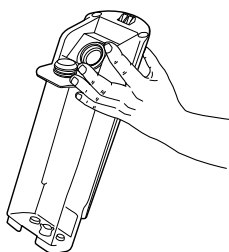

- 2 Pull back the tab to access fill hole.

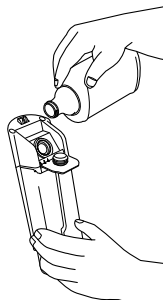


- 3 First fill with warm water to appropriate water line. Second, add solution to solution line.

NOTE: Flap must be clicked in place for proper performance and to prevent leaking.

NOTE: Read the directions on the Hoover Hard Floor solution prior to use.

CLEANING FLUID: SEE THE HOOVER SOLUTION GUIDE insert or visit Hoover.com/cleaning-solutions.

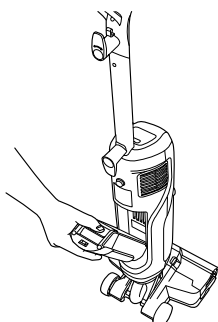

- 4 Close tab and put clean water tank back into the unit.


OPERATION

CAUTION: To prevent damage to wood floors, follow the flooring manufacturer's cleaning recommendations. If using cleaner on sealed wood floors, inspect floor surface for worn finish, bare wood or separated joints. Do not use to clean sealed wood floors if any of these conditions exist.

IMPORTANT: check for worn spots or joint separations before using, as these conditions could lead to damaged flooring when using water to clean floor.

CAUTION: Do not clean over floor electrical outlets.


CAUTION: Do not use the cleaner to pick up flammable or combustible liquids or chemicals.

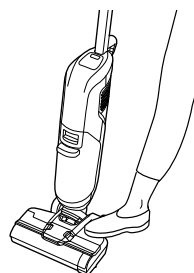

- 1 Recline by placing a foot gently on the floor head of the unit and pull the handle backwards.




- 2 Press the power button (power symbol) to turn the unit on.

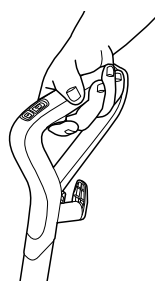


- 3 Engage the trigger on the handle to dispense solution while using the unit.


- 4 Move unit forwards and backwards across hard floors.

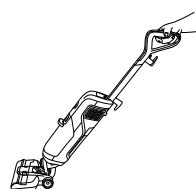

TRIGGER ENGAGED

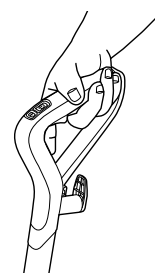


TRIGGER DISENGAGED

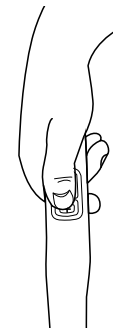

- 5 Press (+) to turn ON/OFF Boost mode. Use Boost mode when cleaning tough stains or when you need more power and water.

****Boost mode only available on select models****

SCREEN FUNCTIONS

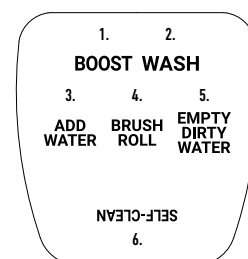


1. BOOST icon lights up when Boost Mode is turned ON.
2. WASH icon lights up when trigger is engaged and Streamline™ is dispensing fluid.
3. ADD WATER icon lights up when the clean water tank needs to be refilled.
4. BRUSH ROLL MAINTENANCE icon lights up to indicate a brush roll jam.
5. EMPTY DIRTY WATER icon lights up when the dirty water tank needs to be emptied.
6. SELF-CLEAN lights up when the unit is in the storage tray. Press the button to initiate the self-clean cycle.

SELF-CLEANING FUNCTION


CAUTION:

Water will drip from the brush roll and underside of the product after use and may puddle. To avoid damage to wood and laminate flooring and to avoid potential slip hazard after use (A) do not need the product on wood and laminate surfaces and (B) placed unit on provided storage tray to contain drips.

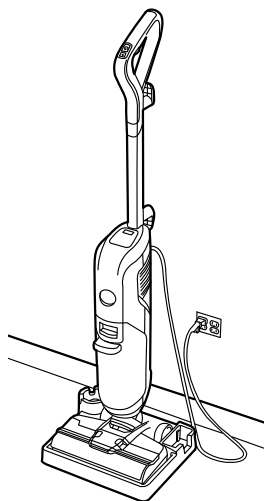

1 Place the unit upright in the self-clean tray.

2 Plug cleaner into an outlet. It must be plugged in for the self-cleaning function to run.

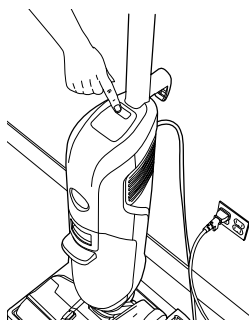


3 Press the self-clean button to start the cleaning cycle.


4

Self-clean will run for 90 seconds and automatically switch off when complete.

EMPTYING DIRTY WATER TANK

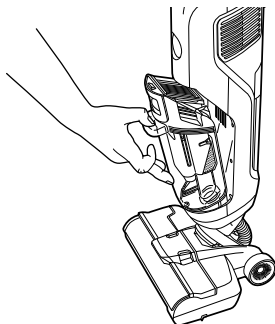


1 Once self-cleaning is done. Remove dirty water tank. To remove the tank, press down on the release latch on the front of the tank and pull the tank away from the unit.

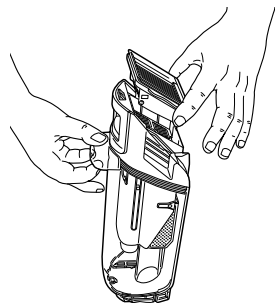

2

Remove filter from top of dirty water tank, rinse with water and place in the designated area on self-clean tray

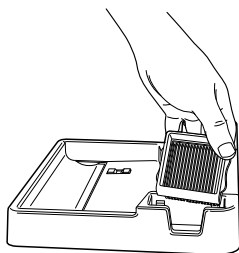


PINCH SIDES AND PULL



3

Empty the tank and rinse.

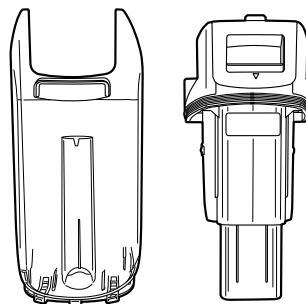

4

Leave tank and lid out to dry before placing back in machine


TIP: Use for picking up small liquid spills (one gallon or less, never to exceed 1/8" in depth). When vacuuming liquid, make sure the product does not get submerged or doused in liquid, which could cause shock, product failure, or personal injury. Ensure filter dries for 24 hrs before reinserting into machine for next use.

CLEANING THE BRUSH ROLL & FOOT

WARNING: To reduce the risk of injury from moving parts unplug before servicing. Do not use cleaner without nozzle in place.


LUBRICATION: The motor and brush roll are equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor or brush roll.

PINCHING CLIPS

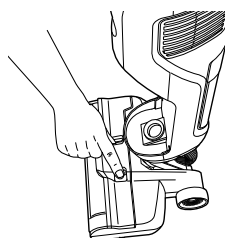


1

Press the clips on the brush roll cover and lift cover to remove.

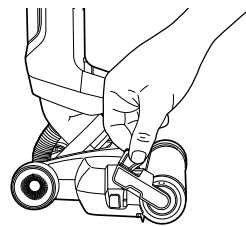

2

Pull the tab up on the outer side of the brush roll and pull up to remove.

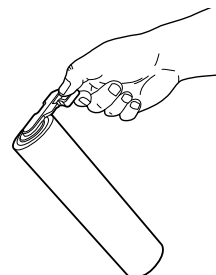


3



Rinse the brush roll and brush roll cover in water.



4


The brush roll can be dried and stored in the self-clean tray.

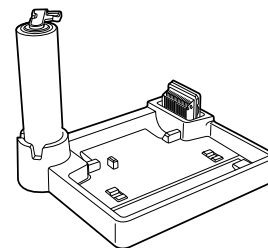

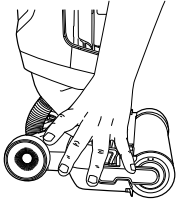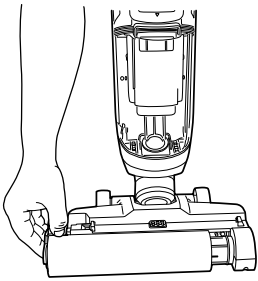

5

To refit the brush roll slide the end of the brush roll without the tab on the spindle and then push the outer side in until it clicks.

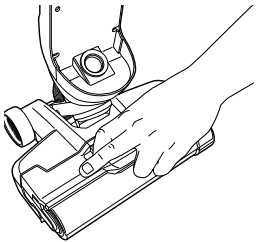

6

Place the brush roll cover directly over placement area and click into place.

PARTS AND ACCESSORIES	PART NUMBER
Handle Assembly	440015953 (FH46010V models ONLY), 440015958 (all other models)
Clean Water Tank Assembly	440015954
Dirty Water Tank Assembly	440015955
Nozzle Cover Assembly	440015956
Self Clean and Storage Assembly	440015957
Filter Assembly	440015959
Brushroll Assembly	440015960
Squeegee Assembly	440015961

TROUBLESHOOTING

This product contains no serviceable parts.

WARNING: To reduce the risk of injury from moving parts - Unplug before servicing. Do not use cleaner without brushes in place.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet.	1. Plug cord in firmly.
	2. Power switch not on.	2. Turn power switch on.
Low suction or won't pick up	1. Dirty Water Tank full/automatic shut off engaged.	1. Remove and empty Dirty Water Tank.
	2. Tanks and/or tank lids not in place.	2. Make sure tanks and/or tank lids are latched in place.
	3. Nozzle not in place.	3. Make sure Nozzle cover is latched in place.
Water puddles behind cleaner	1. Clean Water Tank not firmly in place.	1. Make sure tank is securely locked in position.
	2. Dirty Water Tank full.	2. Empty Dirty Water Tank.
Cleaner solution won't dispense	1. Tank not in place.	1. Make sure both tanks are locked in place.
	2. Clean Water Tank is empty.	2. Refill Clean Water Tank with water and solution.
Brushes won't rotate	1. Brushes not in place.	1. Turn unit off, check brushes are locked into place.
	2. Debris stuck in brushes.	2. Remove any debris stuck between brushes.