



Lithium Cordless Hand Vac

1-2-3...

REFURBISHED USER MANUAL

REPLACEMENT PARTS
• FILTER: F118

961152020 RD 5/16
©2016 Techtronic Floor Care Technology Limited.
All Rights Reserved. Distributed by Royal Appliance Mfg. Co.
Glenview, IL 60039

LET'S GO.™

HI. WELCOME.

Congrats on purchasing your Dirt Devil Hand Vac. Inside, you'll find everything you want to know from the tools to how to.

So what are you waiting for? LET'S GO.™

PRODUCT REGISTRATION

Warranty Registration

Be sure to register your product online at
www.REFURBPRODUCTSUPPORT.COM

For quick reference, please record your product information below.

Model #: _____
Mfg. Code: _____

(Mfg. code located on the back or bottom of product)

This product uses the following parts:
FILTER _____ F118

TABLE OF CONTENTS

1-2-3...
Quick Start Assembly _____ 7
How to _____ 8
Charging _____ 8

Tools _____ 9
Filter Removal and Replacement _____ 10

Troubleshooting _____ 11

Limited Warranty _____ 12

3

WARNING

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use the unit, store, or charge battery outdoors or on wet surfaces. Do not allow to get wet.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use charger with damaged cord or plug. If appliance or charger is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry charger by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger, including charger plug, and charger terminals with wet hands.
- Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and/or dirt cup in place.
- WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. **WASH HANDS AFTER USING.**
- Do not incinerate the charger, battery, or appliance even if it is severely damaged. The batteries can explode in a fire.
- Do not expose battery to crushing, incineration or similar actions.
- Do not dispose of battery in a fire or trash compactor. See battery disposal section for directions.
- Do not attempt to disassemble battery.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin wash quickly with soap and water. If any liquid gets into the eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.
- Use only the charger specified to recharge.
- Do not attempt to short circuit the battery or charger terminals.
- The charger is for indoor use only. Be sure to always keep the battery and charger in a dry place.

- Put product away after use to prevent tripping accidents.
- CAUTION:** Not to be used for grooming a pet.
- CAUTION:** To reduce the risk of injury from moving parts – Do not operate the product without dirt container in place. Keep hair away from rotating brush.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- This product includes rechargeable lithium-ion batteries. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
- Appliance battery use temperature range: -10°C - 60°C (14°F - 140°F).
- Appliance Battery storage temperature range: -20°C-60°C (-4°F - 140°F).
- Recommended temperature range for charging: 5°C-40°C (41°F - 113°F).
- Use only the charger supplied by Royal Appliance to recharge. For 16V batteries use 440008693 and for 20V batteries use 440009713.

CAUTION: TO REDUCE THE RISK OF DAMAGE:
• Avoid picking up hard, sharp objects with this product, as they may cause damage.
• Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
SAVE THESE INSTRUCTIONS

BATTERY DISPOSAL WARNING:
RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL
1-800-822-8337

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate. Dispose of battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

LITHIUM-ION BATTERIES
The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicated Techtronic Industries, a corporate affiliate of Dirt Devil, is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area. Please visit www.rbrc.org/cal2recycle/ for information on Li-ion battery recycling and disposal bans/restrictions in your area. Dirt Devil, involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

QUICK START



**REMOVE FROM
CARTON & REVIEW THE
INSTRUCTION MANUAL.**

**PLUG IN & CHARGE UNIT
UNTIL THE CHARGE
INDICATOR LIGHT GOES
OUT (CHARGING MAY
TAKE UP TO 6 HOURS).**

TIP: For best performance fully charge the product before first use.

**YOUR HAND VAC
IS READY
TO CLEAN!
LET'S GO.™**

HOW TO USE

- Slide the power switch to the **ON** position.
- After using to clean, slide the power switch to the **OFF** position.
- When using for wet pick-up application, avoid tilting the unit backwards. Do not let liquid sit in dirt cup after use. Empty immediately.

NOTE: Empty dirt cup after each use or until full. Check the filter to see if it needs cleaned. Refer to page #10 for filter details.

CHARGING

NOTE: Use only the charger supplied by the manufacturer to recharge.
TIP: For a better experience, fully charge the unit before first use.

1. Power switch must be in the OFF position.

NOTE: The unit can only charge when the switch is in the OFF position.

NOTE: If the unit is running and the charger plug is connected to the unit, the unit will shut off to prevent damage to the charger or unit.

2. The charge indicator light will pulse when charging and the indicator will turn off when charging is complete.

NOTE: The charge indicator will only turn on while charging. The charger will be warm while charging.

NOTE: The unit will charge only for as long as needed. It may take up to 6 hours for full charge.

CAUTION
Not to be used for grooming a pet.

TOOLS

QUICK FLIP™ CREVICE TOOL

Easily clean cracks and crevices.

- Flip the crevice tool out and push in to clean cracks and crevices.
- To store crevice tool: gently pull the tool away from the dust cup and flip the tool up toward the unit & press down until you feel it lock into place.



SQUEEGE*

Easily clean up wet messes on hard surfaces.

- Push rubber squeegee into hand vac nozzle to attach.
- To remove squeegee, gently pull tool away from the hand vac.




CAUTION
To reduce the risk of injury from moving parts, remove powered brushroll before cleaning or servicing.
*Not standard on all models

FILTER REMOVAL AND REPLACEMENT

TIP: To maintain performance, filter should be changed every 3-6 months, or as needed.

- While holding the dirt cup and handle, press dirt cup release button.
- Remove the dirt cup to access filter.
- Remove filter assembly from dirt cup & separate the foam filter from the filter housing. Tap filter over a trash can to remove debris. Be sure to also wipe debris from the filter housing.
- Put the filter back into the filter housing and place filter assembly back into the dirt cup. Reassemble dirt cup to body, align bottom first and rotate up until it clicks.

NOTE: Do not discard filter or filter housing.

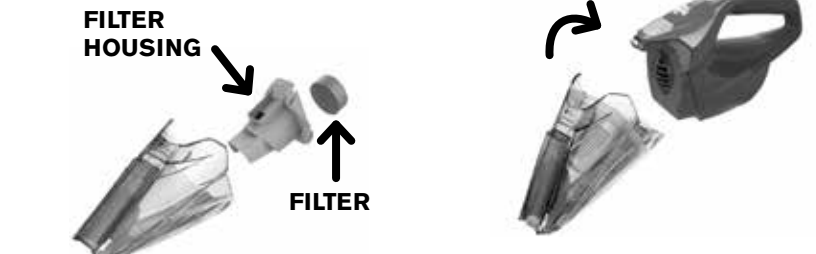

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry.
LUBRICATION The motor is equipped with bearings which contains sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor.
For replacement filter F118 visit dirtdevil.com or call us at (800) 321-1134.

WARNING
To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

TROUBLESHOOTING

Any other servicing should be done by an authorized service representative. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

WARNING
To reduce the risk of personal injury - Turn power switch off before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Battery not charged.	1. Charge battery up to 6 hours. The indicator light will pulse until the battery is fully charged and then will turn off.
	2. Battery dead - won't hold charge.	2. Contact customer service. Visit our website at www.dirtdevil.com or call 1-800-321-1134.
	3. Needs service.	3. Contact customer service. Visit our website at www.dirtdevil.com or call 1-800-321-1134.
Cleaner won't pick up or low suction	1. Dirt Cup not installed correctly.	1. Review Filter Removal & Replacement
	2. Dirt Cup is full.	2. Empty dirt cup.
	3. Battery charge is getting weak.	3. Charge battery.
	4. Filter is dirty.	4. Clean or replace filter.
	5. Clogged filter.	5. Remove filter and clean.
	6. Nozzle/dirt passage clogged.	6. Turn off the unit and then disconnect the nozzle to remove debris.
	7. Filter/Filter Frame missing.	7. Contact customer service. Visit our website at www.dirtdevil.com or call 1-800-321-1134.
Dust escaping from cleaner	1. Dirt cup is full.	1. Turn off unit and remove debris.
	2. Dirt cup not installed correctly.	2. Review Filter Removal & Replacement
	3. Filter not installed correctly.	3. Review Filter Removal & Replacement
Charger indicator flashes then goes out	1. Problem with the charging circuit.	1. Contact customer service. Visit our website at www.dirtdevil.com or call 1-800-321-1134.

LED Illumination
Slow Pulse = Charging (Continuous duration for charge cycle)
Fast Blink = Error (15 seconds duration for error code)

11

WARRANTY

LIMITED WARRANTY

WHAT THIS WARRANTY COVERS

Remanufactured, refurbished, or reconditioned products have a limited warranty as determined by the retailer selling the product to you. This product is warranted against failure due to a defect in materials or workmanship from the date of original purchase. Proof of the original purchase date is needed to make a warranty request or claim. Consumers are required to register their products by visiting <https://www.refurbproductsupport.com>

This warranty is extended to the original purchaser only for products purchased for home use within the contiguous 48 US states. The warranty is not transferrable.

What your warranty does not cover.

- Product purchased "as-is"; clearance; closeout; directly or indirectly from a liquidation website
- Improper installation; Content losses due to failure of the unit
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used for commercial purposes
- Products with original serial number or ARC license plate number that has been removed, altered, or cannot be readily determined
- Rust on the interior or exterior of the product
- Replacement of house fuses or resetting of circuit breakers
- Damage to the product caused by accident, fire, flood or acts of God
- Incidental or consequential damage to personal property caused by possible defects with this appliance
- Costs for removal, packaging, transportation, shipping and/or installation of the unit repair or replacement
- Cosmetic defects, including any plastic part. Inside components such as door panels, door shelves, racks, light bulbs, etc.
- Batteries of any chemistry

Some states do not allow the exclusion or limitation of incidental or inconsequential damages. This warranty gives you specific legal rights and you may have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Exclusion of implied warranty. Except where prohibited or restricted by law, there are no warranties, whether express, oral, or statutory which extend beyond the description of the face hereof, including specifically the implied warranties of merchantability or fitness for a particular purpose.

4

8

12

16