



CLOVER
RETURNS MANAGEMENT
SOLUTIONS

R-UH71320V CERTIFIED-REFURBISHED USER MANUAL

Important Information About Your Refurbished Product

Notice to Customers: This product has been refurbished by Clover Environmental Solutions, LLC dba Clover Returns Management Solutions. We are committed to providing high-quality refurbished household products to meet your needs.

Terms and Conditions: Any terms and conditions set forth in the attached original OEM documentation may not apply to this remanufactured item. For the specific terms applicable to your purchase, please refer to the documentation provided at the time of purchase or visit www.refurbproductsupport.com

Additional Information:

- **Safety Notice:** Ensure you follow all safety instructions provided in the OEM documentation as they remain applicable to the safe operation of this remanufactured product.
- **Recycling and Disposal:** For information on proper disposal or recycling of this product please visit the manufacturer’s website.

Contact Us: If you have any questions or concerns about your refurbished product, please reach out to us via:

Website: www.refurbproductsupport.com

Email: productsupport@cloveres.com

Phone: (844) 745-0760

This cover sheet is being provided to ensure clarity regarding the status and support of your refurbished product. The attached OEM documentation is provided for reference only.



WINDTUNNEL CORD REWIND

UPRIGHT VACUUM

REFURBISHED OWNER'S MANUAL

MODELS: UH71300 | UH71310 | UH71320
UH71330 | UH71350

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for household use only.
Questions or concerns? For assistance, please [contact Customer Service at www.RefurbProductSupport.com](http://www.RefurbProductSupport.com) Mon-Fri 9am-5pm EST.

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

- Fully assemble product prior to use.
- Operate cleaner only at voltage specified on data plate on back of cleaner.
- Do not leave product when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this user's manual. Use only HOOVER® recommended attachments.
- Do not use product with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts. Brush roll continues to rotate when in the upright position.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Unplug before connecting Turbo Tool.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters or dirt cup in place.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Brush roll continues to turn while product is turned on and handle is in upright position. To avoid damage to carpet, rugs, and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- Do not use sharp objects to clean out hose as they can cause damage.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

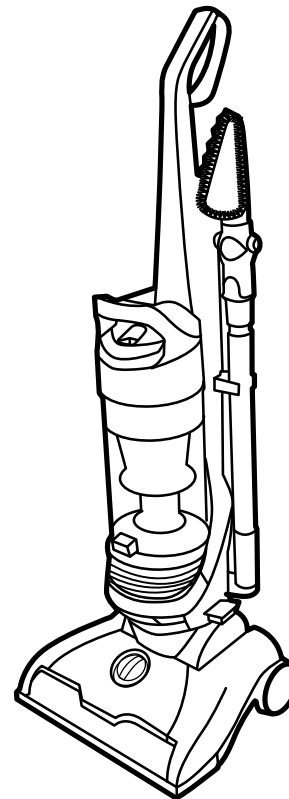 
CORD REWIND AND STORAGE: To return cord for storage, hold plug and press down Cord Release Pedal (B) on side of cord reel.

WARNING: To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

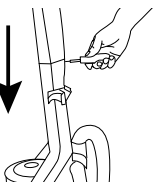 
LUBRICATION: The motor is equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubrication could cause damage. Do not add lubricant to the motor bearings.

THERMAL PROTECTION: A Thermal Protector has been designed into your cleaner to protect it from overheating. When the Thermal Protector activates, the cleaner will stop running. If this happens proceed as follows: 1. Turn cleaner OFF and unplug it. 2. Empty the dirt cup. 3. Inspect the nozzle inlet, hose connector, hose, dirt cup inlet, cyclonic filter rinsable filter and exhaust filter for any obstructions. Clear obstructions if present. 4. When cleaner is de-energized and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue. If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

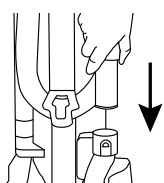 
WARNING: To reduce the risk of personal injury, unplug before cleaning or servicing.



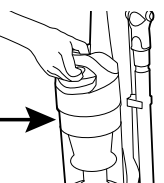 
FULLY ASSEMBLE PRODUCT PRIOR TO USE
ASSEMBLY

1. 

Insert handle section into vacuum base. Push down firmly. Using a Phillips screwdriver, fasten included screw behind handle into vacuum base.

2. 

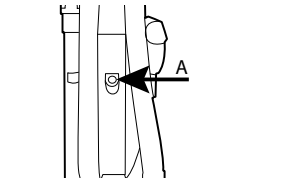 
Wrap hose around top of hose guide located on the handle. Insert the hose into hose tube until you hear a click.

3. 

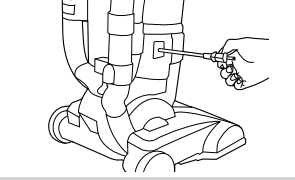 
Place bottom of dirt cup into vacuum body first. Pivot cup into vacuum. Dirt cup is secure when you hear a click.

NOTE: Place the Crevice Tool into Wand and slide into tool storage area on left back side of vacuum and place Turbo Tool on right back side of vacuum as shown. Place adjustable dusting brush on top of wand.

OPERATION
ON/OFF SWITCH
Plug cord into electrical outlet. To turn vacuum ON (I=ON), push ON/OFF switch (A) to ON position. To turn vacuum OFF (O=OFF), push switch to OFF position.

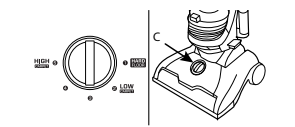 


CORD RELEASE
Prior to using, grasp the end of the plug and pull to release the cord from the cord reel until red tape is reached.



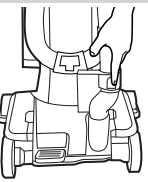 
IMPORTANT: When pulling on the cord, yellow tape will identify when the cord is almost fully extended. When red tape is visible on the cord, the cord has reached its full length. (Do not pull the cord past the red tape.)

CARPET HEIGHT ADJUSTMENT
To adjust height setting, PUSH DOWN and TURN knob (C) to desired height setting.

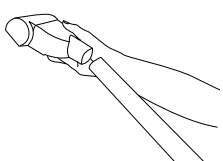 


CAUTION: To reduce the risk of injury from moving parts - Unplug before servicing.

CAUTION: Not to be used for grooming pet.

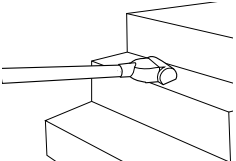 
1. 

To remove hose for tool use, press the hose release button and pull hose end out. To lock back into place, push hose into hose tube until you hear a click..

2. 

To attach tool or wand to hose, push firmly into place.

TO CLEAN STAIRS:

3. 

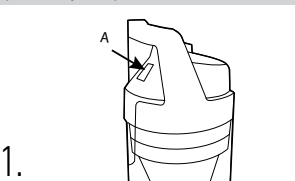 
Use the Hose and Turbo Tool (Tool varies per model) for stair cleaning.

CAUTION: Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at the bottom of the stairs or on the floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage. When using tools, always ensure handle is in the upright position.

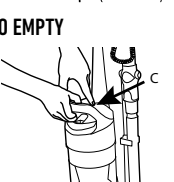 
MAINTENANCE
WARNING: To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

This product contains no serviceable parts. I

IMPORTANT: The System Check Indicator located at (A), alerts you to possible system performance issues.

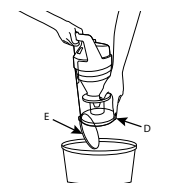 


HOW TO EMPTY

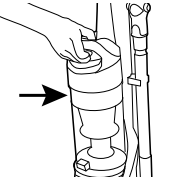 
2. 

Press dirt cup release button (C) and pivot cup out.

MAINTENANCE (CON'T)

3. 

Hold dirt cup over trash receptacle, push dirt cup door release lever (D) to open dirt cup door (E). Close dirt cup door (E). Press firmly to secure.

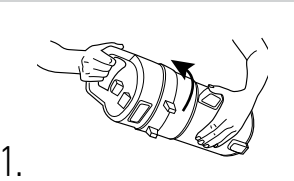 
4. 

Place bottom of dirt cup into vacuum body first. Pivot dirt cup into vacuum body and press firmly until it locks into place.

NOTE: To maintain optimal performance, empty the dirt cup before the dirt cup reaches the max line (B). Place the vacuum in the upright position before removing the dirt cup.

RINSABLE FILTER: HOW TO CLEAN
PART #304087001

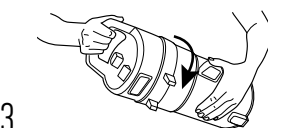 
NOTE: To maintain optimal performance, filters should be cleaned at least every two months under normal use.



1. To clean: Twist the dirt cup handle counterclockwise to open and remove lid.



Pull tab to remove rinsable filter. Rinse with water for two minutes or until water runs clear. Then squeeze out excess water. Allow 24 hours for filter to dry completely. Replace filter, tab side out.

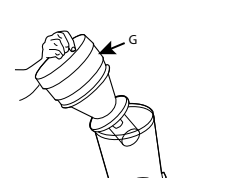 


3. Replace dirt cup lid and twist clockwise until locked in position.

IMPORTANT: Allow filter to dry completely before replacing

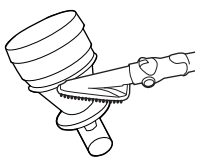 
NOTE: To maintain optimal performance, filters should be cleaned at least every two months under normal use

CYCLONIC FILTER ASSEMBLY: HOW TO CLEAN

1. 

Pull filter assembly (G) out of dirt cup and remove.

MAINTENANCE (CON'T)

2. 

Dirt and debris can be cleaned from the filter assembly with the adjustable dusting brush.

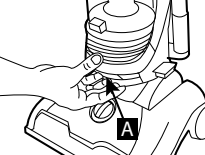 
3. 

Place the filter assembly on the dirt cup. Line up tabs (H) on lid with dirt cup body.

4. 

Replace dirt cup lid and twist clockwise until locked in position. Replace dirt cup.

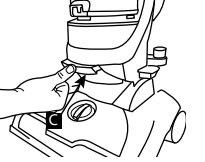 
EXHAUST FILTER: HOW TO CLEAN
(Exact filter may vary by model)
PART #440005573

1. 

 
With fingers under filter door lip, pull filter frame (A) out and away from vacuum body. Hold filter over a trash receptacle and tap out dirt and debris.

2. 

Bottom filter (B) must be pushed back into place first.

3. 

Then push the upper handle in (C) until it clicks.

4. 

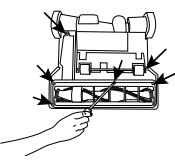 
Filter diagram: (B) bottom filter. (C) upper handle

IMPORTANT: DO NOT RINSE OR WASH THE FILTER MADE WITH HEPA MEDIA.

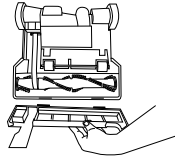 
WARNING: To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

NOTE: Place handle in the low position and turn the cleaner over so the bottom side is up.

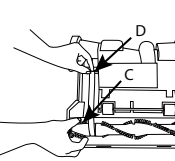 
MAINTENANCE (CON'T)

1. 

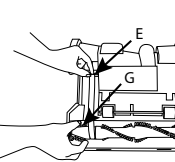 
Remove the 6 screws as shown with a Phillips screwdriver.

2. 

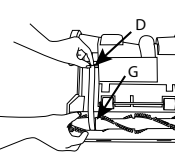 
Lift off bottom plate (A).

3. 

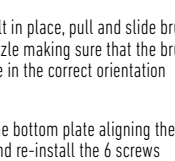 
Remove used belt from brushroll (C) then from motor shaft (metal rod) (D) and discard.

4. 

With lettering on outside of belt, slide new belt over motor shaft (metal rod) (E). Then slip around area of brushroll without bristles (G).

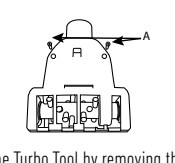 
5. 

With belt in place, pull and slide brushroll into nozzle making sure that the brushroll end caps are in the correct orientation

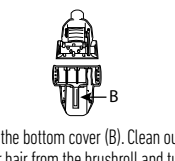 
6. 

Place the bottom plate aligning the screw holes and re-install the 6 screws

POWERED HAND TOOL: HOW TO CLEAN
(Tools vary per model)

1. 

Clean the Turbo Tool by removing the two screws (A), located on the bottom cover, with a Phillips head screwdriver.

2. 

Remove the bottom cover (B). Clean out any debris or hair from the brushroll and turbine fan.

3. 

Replace the bottom cover, insert and tighten the (2) screws.