



SimpliStik™+

My Model is: _____



1-2-3...

REFURBISHED USER MANUAL



REPLACEMENT PARTS
• FILTER: **F113**

86162047 RD 10/16
©2019 Technic Floor Care Technology Limited.
All Rights Reserved. Distributed by Royal Appliances Mfg. Co.
Germantown, OH 44138



LET'S GO.™

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

 
- **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**
- **ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.**
- **DO NOT LEAVE CLEANER UNATTENDED.**

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Fully assemble before operating.
- Operate cleaner only at voltage specified on data plate on back of cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call 1-800-321-1134 for the nearest service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings or use in areas where they may be present.

STICK VAC ATTACHMENTS

SWIPES TOOL*

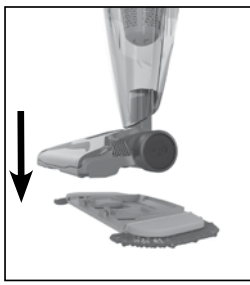

TO INSTALL SWIPES PAD FRAME, PLACE NOZZLE WHEELS IN WHEEL RECESSES IN SWIPES PAD FRAME AND THEN STEP ON LEFT AND RIGHT FRONT OF FLOOR NOZZLE TO SNAP IT TO THE SWIPES FRAME.

TROUBLESHOOTING

Any other servicing should be done by an authorized service representative. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

WARNING To reduce the risk of personal injury – Turn power switch off before cleaning or servicing.

If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.


PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Cleaner won't run	1. Power cord not firmly plugged into outlet.	1. Plug unit in firmly.
	2. Needs service.	2. Call Customer Service: 1-800-321-1134.
Cleaner won't pick up or low suction	1. Dirt cup not installed correctly.	1. Review dirt cup removal and replacement.
	2. Dirt cup full.	2. Empty dirt cup.
	3. Clogged filter.	3. Remove filter and clean.
	4. Dirt inlet tube clogged.	4. Remove nozzle; remove obstruction.
Dust escaping from cleaner	1. Dirt cup full.	1. Empty dirt cup.
	2. Dirt cup not installed correctly.	2. Review dirt cup removal & replacement.
	3. Filter not installed correctly.	3. Review filter removal & replacement.
	4. Filter is dirty.	4. Clean filter or replace.

If you need further assistance, please contact Refurb Product Support via the website at www.RefurbProductSupport.com. Support agents are available Monday through Friday from 8am to 4pm EST. Always identify your vacuum by the complete model number when requesting information. The model number appears on the bottom of the vacuum.

HI. WELCOME.

Congrats on purchasing your new Dirt Devil SimpliStik™+. Inside, you'll find everything you want to know from the tools to how to.

 So what are you waiting for? LET'S GO.™



PRODUCT REGISTRATION

Warranty Registration

Remanufactured, refurbished, or reconditioned products have a limited warranty as determined by the retailer selling the product to you. This product is warranted against failure due to a defect in materials or workmanship from the date of original purchase. Proof of the original purchase date is needed to make a warranty request or claim. Consumers are required to register their products by visiting <https://www.refurbproductsupport.com>

- Always turn off this appliance before connecting or disconnecting motorized nozzle.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Store the product indoors. Put the product away after use to prevent tripping accidents.
- Do not use without filters and/or dirt cup in place.
- **WARNING:** this product contains chemicals, known to the state of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER USING.
- Any other servicing should be done by an authorized service representative.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

 
- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

SAVE THESE INSTRUCTIONS

WARNING:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

- Please read these instructions carefully before using your product.
- Let us help you put your product together, order parts and accessories or answer any questions.
- Please Do Not Return This Product To The Store.

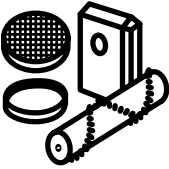

This product uses the following parts:
FILTER _____ **F113**

TABLE OF CONTENTS



1-2-3...

Use as a stick vac	7
How to use	8
Stick vac attachments	9
How to use as a stick vac	10
Filter removal and replacement	11
Clean and rinse filter	12




Troubleshooting	13
-----------------	----



Limited warranty	14
------------------	----

 TABLE DES MATIÈRES



1-2-3...

Comment utiliser comme aspirateur-balais	20
Pour utiliser l'aspirateur	21
Comment utiliser comme aspirateur à main	22
Accessoires de l'aspirateur balai	23
Vide- poussière et filtre : retrait et réinstallation	24
Nettoyage et rinçage du filtre d'évacuation	25




Guide de dépannage	26
--------------------	----




Garantie	27
----------	----

 
HOW TO USE AS A STICK VAC

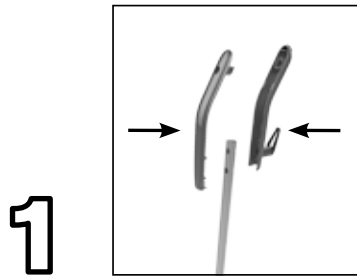

 
1 SURROUND HANDLE TUBE WITH THE TWO HANDLE GRIP PIECES AND PRESS TOGETHER UNTIL YOU HEAR A CLICK. BE SURE THE TUBE IS BETWEEN THE HANDLES BEFORE THEY ARE CLICKED TOGETHER.

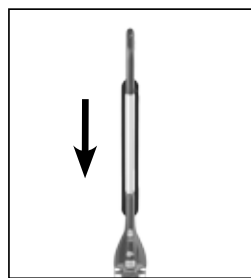

2 INSERT HANDLE TUBE INTO HAND VAC.

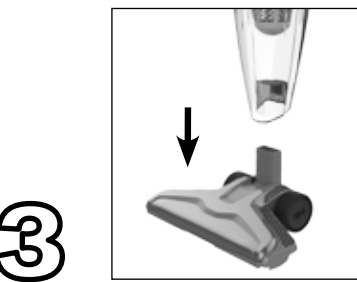 


3 ATTACH FLOOR NOZZLE TO UNIT

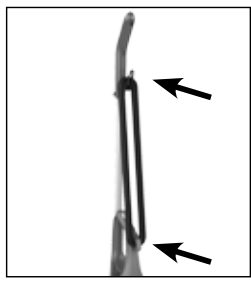 


4 WHEN FINISHED, WRAP CORD AROUND HOOKS FOR CONVENIENT STORAGE. ATTACH THE PLUG END TO THE CORD.

FILTER REMOVAL AND REPLACEMENT

 
TIP: To maintain performance, filter should be changed every 3-6 months, or as needed.

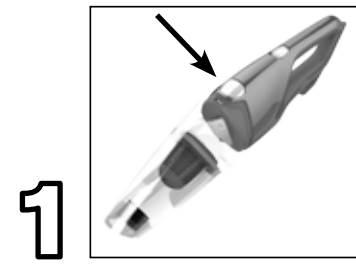

 
1 DEPRESS THE DIRT CUP RELEASE BUTTON WHERE IT SAYS FILTER.

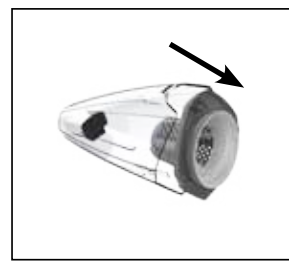

 2 HOLD DIRT CUP OVER A WASTEBASKET. GRASP FILTER AND GENTLY PULL OUT FILTER BASKET.

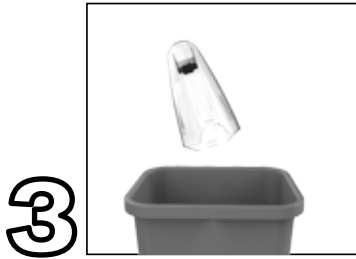

 3 SHAKE DIRT AND DEBRIS OUT OF DIRT CUP.

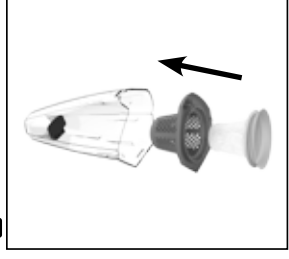

4 REMOVE THE FILTER FROM THE FILTER BASKET. BRUSH THE DUST AND DIRT OFF THE FILTER, OR SHAKE THE FILTER INSIDE OF THE WASTEBASKET.

WARNING

To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

HOW TO USE

 


1 TO TURN ON: SLIDE THE POWER SWITCH TO THE ON POSITION.




2 TO TURN UNIT OFF: SLIDE THE POWER SWITCH TO THE OFF POSITION.


CLEAN AND RINSE FILTER

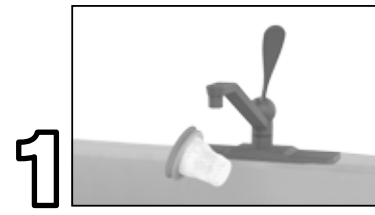

 1 HOLD FILTER UNDER RUNNING WATER TO RINSE. DO NOT USE SOAP/DETERGENT. ALLOW FILTER TO COMPLETELY DRY FOR AT LEAST 24 HOURS BEFORE REPLACING IN DIRT CUP.

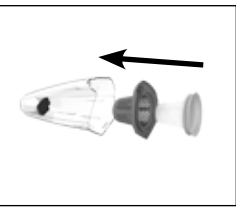

 2 PUT FILTER BACK INTO THE FILTER BASKET AND PUT FILTER BASKET BACK INTO DIRT CUP

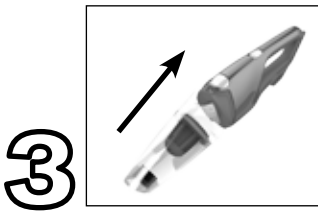

3 TO REATTACH DIRT CUP: ALIGN BOTTOM FIRST AND PIVOT DIRT CUP UNTIL IT SNAPS INTO PLACE.

LUBRICATION:
The motor and brushroll are equipped with bearings which contain sufficient lubrication for their lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor or brushroll.

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry.
LUBRICATION: The motor is equipped with bearings which contain sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor.

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry.
LUBRICATION: The motor is equipped with bearings which contain sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor.