



REFURBISHED MULTI-SURFACE EXTENDED REACH UPRIGHT

REFURBISHED USER MANUAL

MODELS: UD76300 / UD76310 /
UD76330 / UD76340

IMPORTANT: READ ALL INSTRUCTIONS
CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for Household use only.



IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

WARNING: WHEN USING AN ELECTRICAL PRODUCT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO AVOID ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY, INCLUDING THE FOLLOWING:

- Fully assemble product prior to use.
- Operate cleaner only at voltage specified on data plate on back of cleaner.
- Do not leave product when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this user's manual. Use only Dirt Devil® recommended attachments.
- Do not use product with damaged cord or plug. If product is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, visit www.refurbproductsupport.com prior to continuing use.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug,

grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without separator, filters, or dirt cup in place.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Brush roll continues to turn while product is turned on and handle is in upright position. To avoid damage to carpet, rugs, and flooring,


avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.

- Do not use sharp objects to clean out hose as they can cause damage.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.


WARNING: TO REDUCE THE RISK
OF ELECTRIC SHOCK, THIS APPLIANCE HAS
A POLARIZED PLUG (ONE BLADE IS WIDER
THAN THE OTHER). THIS PLUG WILL FIT IN A
POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG
DOES NOT FIT FULLY IN THE OUTLET, REVERSE
THE PLUG. IF IT STILL DOES NOT FIT, CONTACT
A QUALIFIED ELECTRICIAN TO INSTALL THE
PROPER OUTLET. DO NOT CHANGE THE PLUG IN
ANY WAY.

ASSEMBLY

FULLY ASSEMBLE PRODUCT PRIOR TO USE.

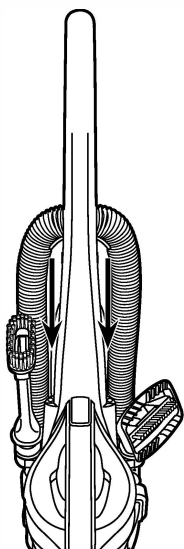


- 1
Locate 2 screws taped to the handle of the unit. Insert handle into body of vacuum, then drive 2 screws at the top to secure the handle.

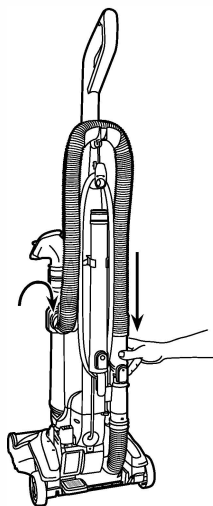


- 2
Twist in left cuff side of the hose to the dirt cup opening. For right side of hose simply insert into the bottom right hose port, it will click when secured.

OPERATION


CAUTION: Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at the bottom of the stairs or on the floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage. When using tools, always ensure handle is in the upright position.

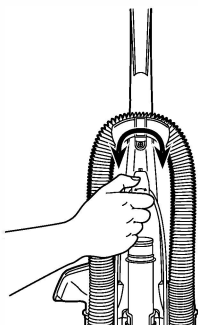


- 1
Twist Cord Wrap Knob to release the Power Cord.

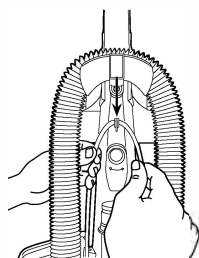


- 2
Insert Power Cord into the Cord Hook to assist keeping the cord away from the nozzle during use.

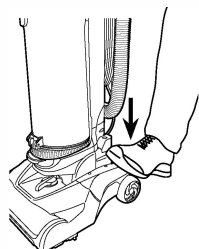

- 3
Step on red Power Pedal to turn ON/OFF.

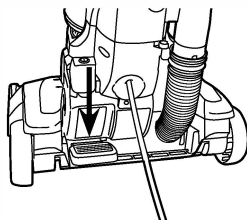

- 4
Step on the silver Recline Pedal to lean vacuum into the cleaning position.

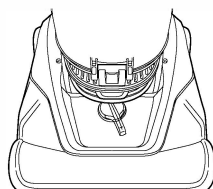

- 5
Adjust the height of the brush roll based off the floor type you are cleaning. If you find the vacuum is difficult to push, adjust the dial to a higher setting.

AVAILABLE TOOLS

NOTE: Your model may not include all tools listed.

All tools lock into place when attached to hose or extension wand.



2 IN 1 CREVICE AND DUSTING TOOL

PART# 440015707

This is a combination of two tools in one. Simply slide up the dusting attachment until it locks into place to use the duster. To use the crevice tool, press side button to unlock and slide down the dusting brush.



UPHOLSTERY TOOL

PART# 440015708

The Upholstery Tool is perfect for picking up hair and debris on couches, curtains, mattresses and more.



PET UPHOLSTERY TOOL

PART# 440015713

With the Pet Upholstery Tool, easily manage pet hair above the floor and clean up hair on furniture with ease.




EXTENSION WAND


PART# 440015706

Use the Extension Wand to increase the reach of the hose so you can reach further under, above and behind to clean all the hard to reach areas.


USING THE HOSE AND TOOLS

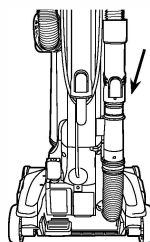

- 1a
Make sure the vacuum is upright and press the hose release button.

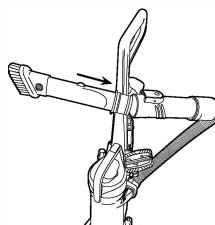


- 1b
Remove hose and attach the desired accessory. The Extension Wand can be added for additional reach.

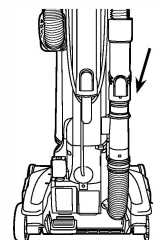

2a

Make sure vacuum is upright and press the hose release button then attach desired attachment.

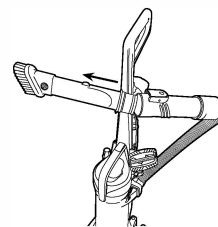

2b


To remove attachment, press the attachment release button, and insert hose back into the unit (Picture 2a showing the button on the attachment being pressed to release attachments).

MAINTENANCE


WARNING: To reduce the risk of personal injury, unplug before cleaning or servicing.

This product contains no serviceable parts. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, visit www.refurbproductsupport.com prior to continuing use.

EMPTYING THE DIRT CUP

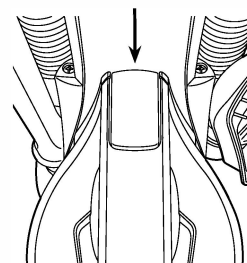

- 1
Press the dirt cup release button.

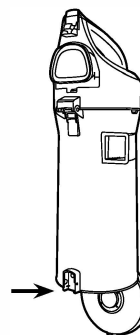


- 2
Empty over trash by pressing dirt cup release button.


CLEANING THE RINSEABLE FILTER

PART#


NOTE: For optimal performance check for debris build up on filter and follow steps below.

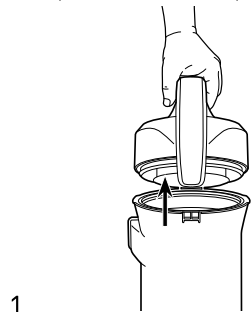

1 Remove the dirt cup, then open the dirt cup latch to access the rinseable filter.

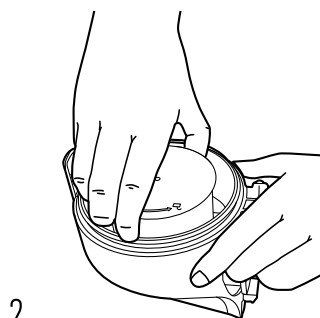

2 Twist filter to the left to unlock, then lift plastic puck off of the dirt cup.

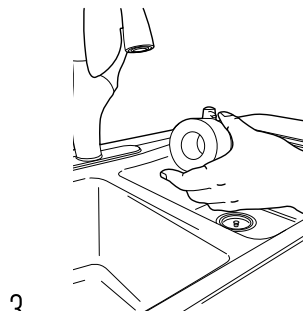

3 Remove foam filter from the plastic puck and rinse filter with water only until the filter is clean. Make sure the water running through becomes clear.




4 Allow for the filter to air dry at least 24 hours before placing filter back into the unit.

IMPORTANT: The filter must be completely dry before replacing it. This may take between 24 and 48 hours.


Check the inside of filter for dampness before replacing.

CLEANING THE WASHABLE EXHAUST FILTER


EXHAUST FILTER 440015704

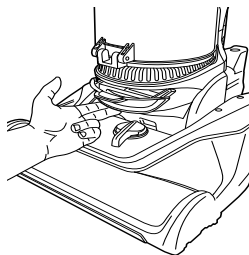

1 Remove red tray located under the dirt cup on front of vacuum.

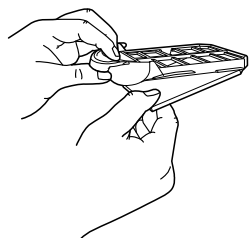

2 Remove filter from the bottom of the tray.

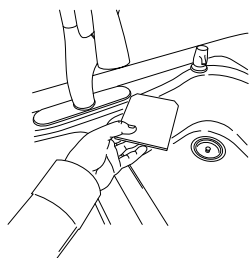

3 Rinse filter with water only until the filter is clean and the water runs through clear.



4 Allow for the filter to air dry at least 24 hours before placing filter back into the unit.

IMPORTANT: The filter must be completely dry before replacing it. This may take between 24 and 48 hours.


Check the inside of filter for dampness before replacing.

CAUTION: To reduce the risk of injury from moving parts, unplug before servicing.


HOW TO REPLACE BELT AND CLEAN BRUSH ROLL

BRUSHROLL PART


BELT PART

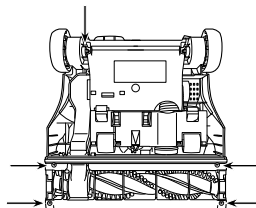

1 Remove 5 screws and pull upward to remove nozzle guard.

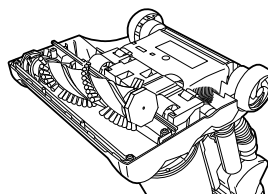


2 Pull brush roll out from the vacuum belt.

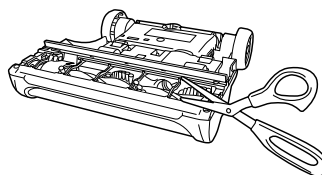

3 Cut off tangled hair along grooves.

NOTE: Hair can also be cut off without removing the guard

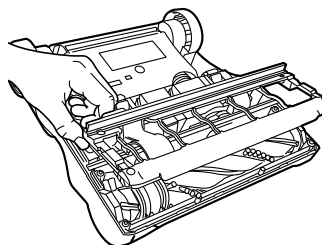

4 To replace the brush roll, loop the belt around the brush roll and push the roll back into place. Replace the nozzle guard and five screws.

TIP: Rotate brush roll manually to ensure the belt is properly installed. Check for obstructions in the brush roll area and remove any obstructions. When obstructions are cleared, resume cleaning as normal.

WARNING: To reduce the risk of personal injury, unplug before cleaning or servicing.

REMOVING SYSTEM CLOGS

To reduce the chance of system clogs be sure to clean up larger debris from the area before vacuuming.

If you are experiencing a loss of suction, or you notice debris is spitting out of the nozzle, we recommend checking the nozzle, tube, hose and filters for any visible signs of blockage or built up debris. It is also recommended to rinse your Filter if there is visible built up dirt and dust on the filter. This should help improve performance on your vacuum.

THERMAL PROTECTION

A thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates the cleaner will stop running.

If this happens proceed as follows:

1. Turn cleaner OFF and unplug it.
2. Empty the dirt cup
3. Inspect the nozzle inlet, hose connector, hose, dirt cup inlet, cyclonic filter, rinsable filter and exhaust filter for any obstructions. Clear obstructions if present.
4. When cleaner is de-energized and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

TROUBLESHOOTING

WARNING: Unplug cord from electrical outlet before servicing.

Find available replacement parts and accessories at DirtDevil.com If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, visit www.refurbproductsupport.com prior to continuing use. Always identify your cleaner by the complete model number. (The model number appears on the bottom of the cleaner.)

PROBLEM	POSSIBLE SOLUTION
My vacuum will not turn ON	1. Always be sure to plug it in firmly.
	2. The Thermal Protector may have been activated - unplug your vacuum and let cool for 30 minutes. If this does not work, there may be no voltage in the wall plug.
	3. Check the fuse or breaker in your home. If there is a blown fuse or tripped breaker, replace the fuse in your home or reset the breaker.
My vacuum is hard to push	1. Adjust the height of the nozzle to a higher setting.
My vacuum is losing suction and/or not picking up	1. Be sure to empty the dirt cup if it is full. Check that the dirt cup is properly assembled and installed onto the appliance.
	2. You may have a clogged filter or a clog in the system. Refer to the Maintenance section in this manual for directions on removing clogs.
	3. Your filter may be dirty, for optimal performance, rinse every 6-12 months. Refer to the Maintenance section for more direction on how to clean your filter.
	4. Change the nozzle height, adjust setting for appropriate floor/carpet type for deepest clean, use the lowest position.
My brush roll is not spinning	1. Unplug and remove any hair or other blockages around the brush roll.
	2. Replace the belt.