



HANDHELD STEAMER

REFURBISHED USER MANUAL

IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.

This product is intended for Household use only. If used Commercially warranty is VOID. PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

WARNING: WHEN USING AN ELECTRICAL PRODUCT, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO AVOID ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY, INCLUDING THE FOLLOWING:

- Fully assemble product prior to use.
- Operate steam cleaner only at voltage specified on data label on back of steam cleaner.
- Do not leave steam cleaner when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not use outdoors or store outdoors.
- Do not use for space heating purposes.
- Do not immerse in water.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings
- Do not use any extension cord with this product.
- Do not handle the plug, or the Steam Cleaner with wet hands.
- Do not place hands or feet under the Steam Cleaner while it is in operation as the unit gets very hot and may create a burn hazard.
- When not in use place on flat, horizontal surface.
- To protect against a risk of electric shock, do not immerse the Steam Cleaner into water or any other liquids.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.
- Do not use product with damaged cord or plug. If product is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, **contact** customer service at refurbproductsupport.com prior to continuing use.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not put any object into openings. Do not use with any opening blocked.
- Keep hair, loose clothing, fingers, and all parts of body away from openings.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. When not in use do not place steam cleaner on stairs or furniture, as it may result in injury or damage.
- To avoid burn or injury, do not apply steam directly to any person or animal.
- Only use water to refill the water tanks. Do not use any type of chemicals or additives in the water tank.
- Do not add descaling, aromatic, alcoholic products, cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this steam cleaner as this may damage the steam cleaner or make it unsafe for use. While this Steam Cleaner is designed for tap water, to increase effectiveness of the steam and to avoid build up of materials, you may use distilled water.
- Do not use Steam Cleaner in an enclosed space filled with vapor given off by oil-based paint, paint thinners, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- When in use, never turn the steam cleaner over or use while on its side.
- This product contains no serviceable parts.
- Allow Steam Cleaner sufficient time to cool prior to removing the tank cap.
- Before cleaning, unplug the power cord from the electrical outlet and clean with a dry or

damp cloth. Do not pour water or use alcohol, benzene or paint thinner on the steam cleaner.

- Do not use in areas where flammable or combustible liquids, such as gasoline may be present.
- Do not clean over electrical outlets.
- Do not use the steam cleaner on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
- Do not operate Steam Cleaner without water in water tanks.
- Unplug Steam Cleaner from outlet before filling, rinsing or cleaning. Do not fill water tanks with more than recommended amount of water.
- Don't clean electrified appliance to prevent electric shock.
- Connect to a properly grounded outlet only. See Grounding Instructions.

CAUTION: TO REDUCE THE RISK OF DAMAGE:

 
- Check and follow fabric manufacturers warranty and recommendations regarding the use of steam cleaners PRIOR to using this product.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.
- Chemical fiber and silk cannot be cleaned with steam.
- Put product away after use to prevent tripping accidents.
- To prevent windows from cracking in winter, keep the jet nozzle 30cm away from glass to preheat the window first.

GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor (C) and grounding plug (A). The plug must be inserted into an appropriate outlet (B) that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING:

Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug (A) illustrated in Fig. 1.

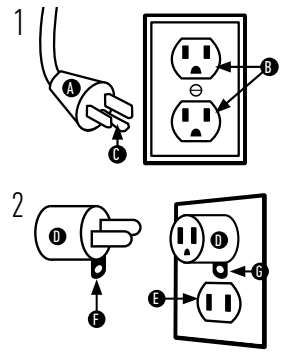


A temporary adapter (D) may be used to connect this plug to a 2-prong receptacle (E) if a properly grounded outlet is not available (Fig. 2). The temporary adapter should be used only until a properly grounded outlet (B) can be installed by a qualified electrician (Fig. 1). The green colored rigid ear, lug, or the like (F) extending from the adapter must be connected to a permanent ground (G) such as a properly grounded outlet box cover (Fig. 2). Whenever the adapter is used, it must be held in place by a metal screw. NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

ASSEMBLY

WARNING: Danger of scalding. The appliance emits hot steam. Handle with care.


If any parts are damaged or missing, please contact refurbproductsupport.com for assistance.

 INSTRUCTIONS FOR USE

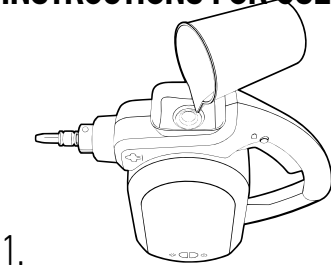


- 1.
- Fill with water, capacity is 250ml.
- Use distilled water.
 - NEVER FILL WITH DETERGENTS OR NON-DIRT DEVIL STEAM ENHANCERS.

 - 2.
- Then turn clockwise to close the safety valve.

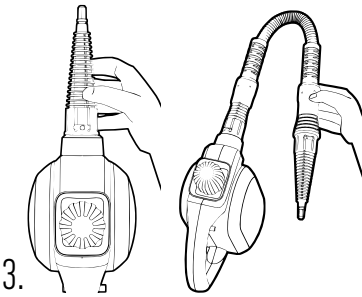


- 3.
- Add desired cleaning accessory to either the steam accessory hose or the steam adaptor.

 CONNECT POWER CORD:

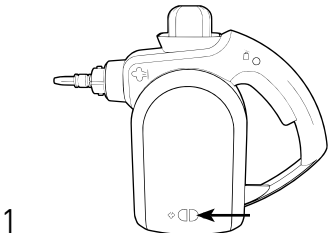


- 1.
- Plug the plug into the socket as required.
- When the indicator turns red color. It is heating.

 CLEANING:

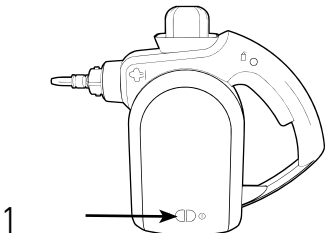

 
- 1.
- When the pressure and steam is ready, the indicator will turn green color.
- Do not apply steam to any object that is heat sensitive.

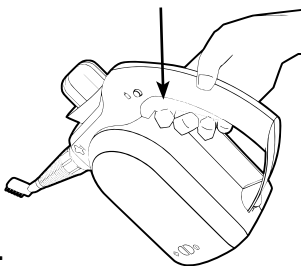


- 2.
- Push the trigger lock. Pull Steam Trigger to apply steam to cleaning surface.

CAUTION: Wait until there is no steam or pressure remaining in the boiler before opening the safety valve. Once there is no pressure or steam remaining, the boiler may be opened and filled with water.

 
TURNING OFF:

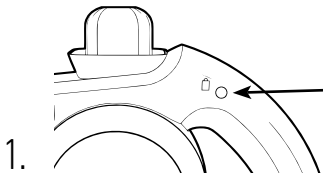

 - 1.
- Unplug the plug and point the unit in a clear direction with nothing that can be harmed by the hot steam.

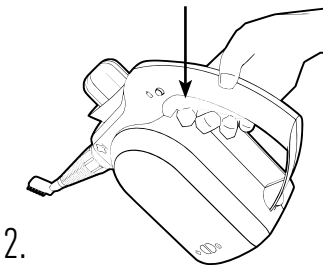

 - 2.
- Release the steam and pressure until you see it stop.

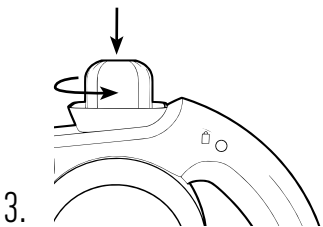



- 3.
- Once the steam and pressure is released, you can now remove the fill cap by pressing down and twisting to the left.

If, you are done cleaning then let it cool, empty the remaining water and store indoors. If, you wish to keep cleaning and your tank is empty then you may refill with 250 ml of water and reseal the cap, once it has cooled.

STORAGE

- NEVER ATTEMPT TO COVER THE HOT STEAM CLEANER IMMEDIATELY AFTER USE.
- DON'T PLACE IT NEARBY ANY HEAT SOURCE.
- PLACE THE APPLIANCE IN A DRY AMBIENT TEMPERATURE AREA WITH GOOD VENTILATION.

  TOOL DESCRIPTION LIST

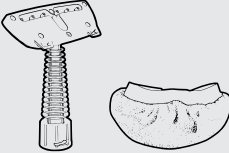TOOL	DESCRIPTION*:
STRAIGHT NOZZLE* 	Allows every tool to effortlessly connect to the steamer. Can be attached directly to the steamer or to the extension hose.
BENT NOZZLE* 	Clean hard-to-reach areas precisely.
ROUND NYLON BRUSH* 	Gently scrub hard surfaces for a simple clean.
ROUND METAL BRUSH* 	Provide a deep clean on tough messes or surfaces. Cast iron cookware, grills, and flat tops.
STRAIGHT NYLON BRUSH* 	Scrub and deep clean grout lines to restore hard surfaces.
FLAT SCRAPER* 	Scrape hard, stuck-on messes on micro-waves, ovens, and more.
LINEN STEAMER AND CLOTH* 	Smooth out wrinkles on a variety of clothes, sheet, drapes and more.
SQUEEGEE ATTACHMENT* 	Easily tackle wet messes with streak-free results on windows, tubs, showers, counters, and more.
EXTENSION HOSE* 	Provides additional reach in tight spaces.

*Tools may vary based on model number