



# Quick Flip™

Lithium Cordless Hand Vac



1-2-3...



## REFURBISHED USER MANUAL



REPLACEMENT PARTS  
• FILTER: F105

ID# 96152010, INSTRUCTION MANUAL, 8030010, A1  
©2016 Technic Floor Care Technology Limited.  
All Rights Reserved. Distributed by Royal Appliance Mfg. Co.  
Oremville, GA 30135

LET'S GO.™

### WARNING

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALY WARRANTY IS VOID.

#### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

#### WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use the unit, store, or charge battery outdoors or on wet surfaces. Do not allow to get wet.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used by or near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use charger with damaged cord or plug. If appliance or charger is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry charger by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug charger by pulling on cord. To unplug charger, grasp the plug, not the cord.
- Do not handle charger, including charger plug, and charger terminals with wet hands.
- Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where there may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and/or dirt cup in place.
- WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. WASH HANDS AFTER USING.
- Do not incinerate the charger, battery, or appliance even if it is severely damaged. The batteries can explode in a fire.
- This product includes rechargeable lithium-ion batteries. Do not expose batteries to high temperatures, as they may catch fire and/or explode.
- Do not expose battery to crushing, incineration or similar actions.

- Do not dispose of battery in a fire or trash compactor. See battery disposal section for directions.
- Do not attempt to disassemble battery.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin wash quickly with soap and water. If any liquid gets into the eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.
- Use only the charger specified to recharge.
- Do not attempt to short circuit the battery or charger terminals.
- The charger is for indoor use only. Be sure to always keep the battery and charger in a dry place.
- Put product away after use to prevent tripping accidents.
- CAUTION: Not to be used for grooming a pet.

#### CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

#### BATTERY DISPOSAL WARNING:

RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL.  
1-800-822-8337

#### CAUTION:

The battery used in this device may present a risk of fire or chemical burn if misused. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate. Dispose of battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire. Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.

#### LITHIUM-ION BATTERIES

The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicated Technic Industries, a corporate affiliate of Dirt Devil, is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area. Please visit [www.rbrc.org/call2recycle/](http://www.rbrc.org/call2recycle/) for information on Li-ion battery recycling and disposal bans/restrictions in your area. Dirt Devil, involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

### HI. WELCOME.

Congrats on purchasing your new Dirt Devil Hand Vac. Inside, you'll find everything you want to know from the tools to how to.

So what are you waiting for? LET'S GO.™

### PRODUCT REGISTRATION

#### Warranty Registration

Be sure to register your product online at [WWW.REFURBPRODUCTSUPPORT.COM](http://WWW.REFURBPRODUCTSUPPORT.COM)

For quick reference, please record your product information below.

Model #: \_\_\_\_\_

Mfg. Code: \_\_\_\_\_

(Mfg. code located on the back or bottom of product)

This product uses the following parts:  
FILTER \_\_\_\_\_ F105

### TABLE OF CONTENTS

- 1-2-3... Quick Start Assembly \_\_\_\_\_ 7
- How to \_\_\_\_\_ 8
- Tools \_\_\_\_\_ 9
- Charging \_\_\_\_\_ 9
- Filter Removal and Replacement \_\_\_\_\_ 10
- Troubleshooting \_\_\_\_\_ 11
- Limited Warranty \_\_\_\_\_ 12

### TABLE DES MATIÈRES

- 1-2-3... Assemblage rapide \_\_\_\_\_ 17
- Ensamblaje para inicio de uso rápido \_\_\_\_\_ 27
- Comment faire \_\_\_\_\_ 18
- Instrucciones de uso \_\_\_\_\_ 28
- Accessoires \_\_\_\_\_ 19
- Herramientas \_\_\_\_\_ 29
- Recharge \_\_\_\_\_ 19
- Carga \_\_\_\_\_ 29
- Retrait et réinstallation du filtre \_\_\_\_\_ 20
- Extracción y limpieza del filtro \_\_\_\_\_ 20
- Dépannage \_\_\_\_\_ 21
- Resolución de problemas \_\_\_\_\_ 31
- Garantie limitée \_\_\_\_\_ 22
- Garantía limitada \_\_\_\_\_ 32

### QUICK START

**1 REMOVE FROM CARTON & REVIEW THE INSTRUCTION MANUAL.**

**2 PLUG IN & CHARGE UNIT UNTIL THE CHARGE INDICATOR LIGHT GOES OUT (CHARGING MAY TAKE UP TO 6 HOURS).**

### YOUR HAND VAC IS READY TO CLEAN! LET'S GO.™



NEED HELP? Go to [dirtdevil.com/support](http://dirtdevil.com/support) or contact our Customer Service Department at (800) 321-1134

Pick up the conversation on...  
Facebook.com/DirtDevil  
Twitter@DirtDevil

### HOW TO USE

- Slide the power switch to the ON position.
  - After cleaning, slide the power switch to the OFF position.
- NOTE: Empty dirt cup after each use or until full. Check the filter to see if it needs cleaned. Refer to page #10 for filter details.
- TIP: The power switch must be in the OFF position for the unit to charge.



### CAUTION


Not to be used for grooming a pet.

### TOOLS

#### QUICK FLIP™ CREVICE TOOL

Easily clean cracks and crevices.


- Flip the crevice tool out and push in to clean cracks and crevices.
- To store crevice tool: gently pull the tool away from the dust cup and flip the tool up toward the unit & press down until you feel it lock into place.

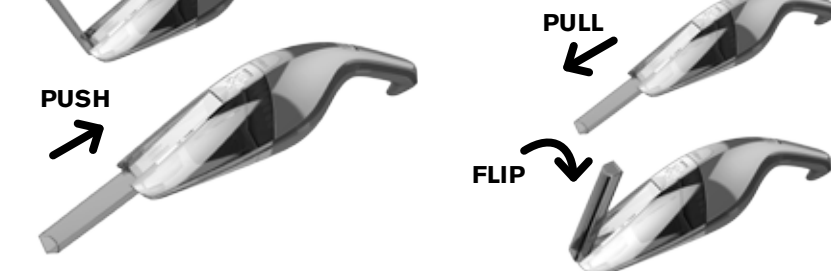

### CHARGING

NOTE: Use only the charger supplied by the manufacturer to recharge. TIP: For a better experience, fully charge the unit before first use.

- Power switch must be in the OFF position.
- The charge indicator light will pulse when charging and the indicator will turn off when charging is complete.

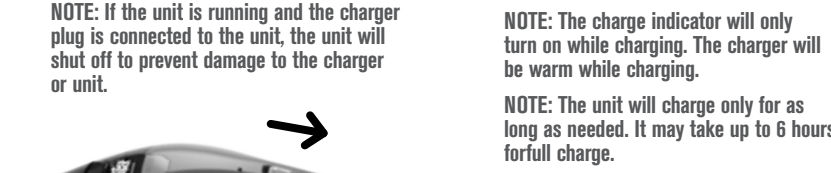

NOTE: If the unit is running and the charger plug is connected to the unit, the unit will shut off to prevent damage to the charger or unit.

NOTE: The unit will charge only for as long as needed. It may take up to 6 hours for full charge.


### FILTER REMOVAL AND REPLACEMENT

TIP: To maintain performance, filter should be changed every 3-6 months, or as needed.

- While holding the dirt cup and handle, press dirt cup release button.
- Remove the dirt cup to access filter.



- Remove filter assembly from dirt cup & separate the white filter from the filter housing. Tap filter over a trash can to remove debris. Be sure to also wipe debris from the filter housing.
- Put the filter back into the filter housing and place filter assembly back into the dirt cup. Reassemble dirt cup to body, align bottom first and rotate up until it clicks.

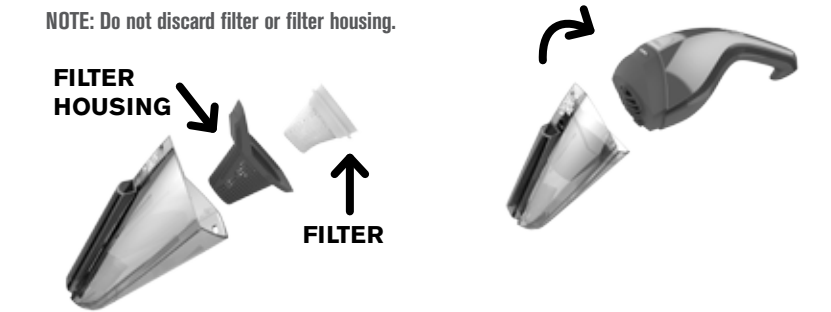

NOTE: Filter is rinseable with water. Do not use soap/detergent. Let filter air dry for 24 hours or until completely dry. LUBRICATION The motor is equipped with bearings which contain sufficient lubrication for its lifetime. The addition of lubricant could cause damage. Do not add lubricant to motor.

### WARNING

To reduce the risk of personal injury, turn power switch off before cleaning or servicing.

### TROUBLESHOOTING

Any other servicing should be done by an authorized service representative. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.

#### WARNING

To reduce the risk of personal injury - turn power switch off before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	1. Battery not charged.	1. Charge battery up to 6 hours. The indicator light will pulse until the battery is fully charged and then will turn off.
	2. Battery dead - won't hold charge.	2. Contact customer service. Visit our website at <a href="http://www.dirtdevil.com">www.dirtdevil.com</a> or call 1-800-321-1134.
	3. Needs service.	3. Contact customer service. Visit our website at <a href="http://www.dirtdevil.com">www.dirtdevil.com</a> or call 1-800-321-1134.
Cleaner won't pick up or low suction	1. Dirt Cup not installed correctly.	1. Review Filter Removal & Replacement
	2. Dirt Cup is full.	2. Empty dirt cup.
	3. Battery charge is getting weak.	3. Charge battery.
	4. Filter is dirty.	4. Clean or replace filter.
	5. Clogged filter.	5. Remove filter and clean.
Dust escaping from cleaner	6. Nozzle/dirt passage clogged.	6. Turn off the unit and then disconnect the nozzle to remove debris.
	7. Filter/Filter Frame missing.	7. Contact customer service. Visit our website at <a href="http://www.dirtdevil.com">www.dirtdevil.com</a> or call 1-800-321-1134.
Charger indicator flashes then goes out	1. Dirt cup is full.	1. Turn off unit and remove debris.
	2. Dirt cup not installed correctly.	2. Review Filter Removal & Replacement
	3. Filter not installed correctly.	3. Review Filter Removal & Replacement

LED Illumination

Slow Pulse = Charging (Continuous during charge cycle)

Fast Blink = Error (15 seconds duration for error code)

### WARRANTY

#### WHAT THIS WARRANTY COVERS

Remanufactured, refurbished, or reconditioned products have a limited warranty as determined by the retailer selling the product to you. This product is warranted against failure due to a defect in materials or workmanship from the date of original purchase. Proof of the original purchase date is needed to make a warranty request or claim. Consumers are required to register their products by visiting <https://www.refurbproductsupport.com>

This warranty is extended to the original purchaser only for products purchased for home use within the contiguous 48 US states. The warranty is not transferrable.

#### What your warranty does not cover.

- Product purchased "as-is"; clearance; closeout; directly or indirectly from a liquidation website
- Improper installation; Content losses due to failure of the unit
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used for commercial purposes
- Products with original serial number or ARC license plate number that has been removed, altered, or cannot be readily determined
- Rust on the interior or exterior of the product
- Replacement of house fuses or resetting of circuit breakers
- Damage to the product caused by accident, fire, flood or acts of God
- Incidental or consequential damage to personal property caused by possible defects with this appliance
- Costs for removal, packaging, transportation, shipping and/or installation of the unit repair or replacement
- Cosmetic defects, including any plastic part. Inside components such as door panels, door shelves, racks, light bulbs, etc.
- Batteries of any chemistry

Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Exclusion of implied warranty. Except where prohibited or restricted by law, there are no warranties, whether express, oral, or statutory which extend beyond the description of the face hereof, including specifically the implied warranties of merchantability or fitness for a particular purpose.



# Quick Flip™


Aspirateur portatif sans fil à batterie au lithium



1-2-3...



## GUIDE DE MANUEL

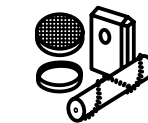

PIÈCES DE RECHANGE  
• FILTRE : F105

ID# 96152010, INSTRUCTION MANUAL, 8030010, A1  
© Technic Floor Care Technology Limited, 2016.  
Tous droits réservés. Distribué par Royal Appliance Mfg. Co.  
Oremville, Ga. 30135

LET'S GO.™

### BONJOUR! BIENVENUE

Félicitations pour l'achat de votre nouvel aspirateur portatif Dirt Devil. Vous trouverez à l'intérieur de ce manuel tout ce que vous devez savoir au sujet de l'utilisation de vos accessoires.

Alors, qu'attendez-vous? ALLONS-Y!™

### ENREGISTREMENT DU PRODUIT

Enregistrement de la garantie Assurez-vous d'enregistrer votre produit en ligne sur le site [www.refurbproductsupport.com](http://www.refurbproductsupport.com)

Conseil : Brochez vos reçus d'achat à ce manuel du propriétaire. La vérification de la date d'achat peut être requise pour une réparation au titre de la garantie de votre produit DirtDevil™.

Veuillez inscrire les renseignements de votre appareil ci-dessous afin de les consulter rapidement.

Model #: \_\_\_\_\_

Code du fabricant : \_\_\_\_\_

(Vous trouverez le code du fabricant à l'arrière ou au bas de l'appareil)

Vous trouverez vos pièces de rechange d'ORIGINE en visitant le site [www.dirtdevil.com](http://www.dirtdevil.com)

Cet appareil est équipé des pièces suivantes :  
FILTRE \_\_\_\_\_ F105

### AVERTISSEMENT

IMPORTANT : LISEZ ATTENTIVEMENT AVANT L'ASSEMBLAGE ET L'UTILISATION. CET APPAREIL EST DESTINÉ UNIQUEMENT À UN USAGE DOMESTIQUE. UNE UTILISATION À DES FINS COMMERCIALES ANNULE LA GARANTIE.

CONSIGNES DE SÉCURITÉ IMPORTANTES Lorsque vous utilisez des appareils électriques, veuillez toujours respecter entre autres les consignes de sécurité énumérées ci-dessous.

VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL

AVERTISSEMENT : POUR RÉDUIRE LE RISQUE D'INCENDIE, DE DÉCHARGE ÉLECTRIQUE, DE DOMMAGE OU DE BLESSURE :

- Évitez d'utiliser ou de ranger l'appareil, ainsi que de charger sa batterie à l'extérieur ou sur des surfaces mouillées. N'exposez pas l'appareil à l'eau ou à l'humidité.
- Ne permettez pas aux enfants de jouer avec l'appareil. Cet appareil ne doit pas être utilisé par des enfants de moins de 12 ans. Exercez une surveillance étroite lorsque l'appareil est utilisé par un enfant ou près de lui. Gardez l'appareil hors de la portée des enfants et ne laissez pas ces derniers introduire leurs doigts ou d'autres objets dans aucune ouverture afin d'éviter les blessures ou les bris.
- Utilisez l'appareil uniquement aux fins décrites dans le présent guide. Utilisez uniquement les accessoires recommandés par le fabricant.
- N'utilisez pas le chargeur si la fiche ou le cordon est endommagé. Si l'appareil ou le chargeur ne fonctionnent pas adéquatement, s'ils sont tombés sur le sol ou dans l'eau, s'ils sont endommagés ou ont été laissés à l'extérieur, apportez-les à un centre de service pour les faire inspecter avant de continuer à les utiliser.
- Ne tenez pas ni ne transportez le chargeur par le cordon, n'utilisez pas le cordon comme une poignée, ne coincez pas le cordon dans l'embrasure d'une porte et ne l'appuyez pas contre des arêtes tranchantes ou des coins. Ne placez pas l'appareil sur le cordon. Ne faites pas rouler l'appareil sur le cordon. Tenez le cordon éloigné des surfaces chaudes.
- Ne débranchez pas le chargeur en tirant sur le cordon. Pour débrancher le chargeur, tirez sur la fiche.
- Ne manipulez pas le chargeur, y compris la fiche et les bornes, si vous avez les mains mouillées.
- N'insérez aucun objet dans les ouvertures. N'utilisez pas l'appareil si les ouvertures sont obstruées. Assurez-vous qu'elles sont exemptes de poussière, de mousse, de cheveux ou de tout ce qui pourrait réduire le débit d'air.
- Gardez les cheveux, les vêtements amples, les doigts et toute autre partie du corps à l'écart des ouvertures et des pièces en mouvement.
- Redoublez de prudence lorsque vous utilisez l'appareil dans un escalier. Ne placez pas l'appareil sur les marches d'un escalier ou sur un meuble, car cela peut entraîner des dommages ou des blessures.
- N'utilisez pas l'appareil pour aspirer des liquides inflammables ou combustibles, comme de l'essence, ni dans des endroits où de telles substances peuvent être présentes.
- N'utilisez pas l'appareil pour aspirer quoi que ce soit qui brûle ou dégage de la fumée comme des cigarettes, des allumettes ou des cendres chaudes.
- N'utilisez pas l'appareil sans avoir installé le vide-poussière et les filtres.

AVERTISSEMENT : Ce produit contient des produits chimiques reconnus par l'État de la Californie comme pouvant causer le cancer, des anomalies congénitales ou des dysfonctions du système reproducteur. BIEN SE LAVER LES MAINS APRÈS L'UTILISATION.

- N'incinerez pas le chargeur, la batterie ou l'appareil même s'ils sont gravement endommagés. La batterie peut exploser au feu.
- Ce produit contient une batterie au lithium-ion rechargeable. N'exposez pas la batterie à des températures élevées, car elle pourrait s'enflammer et exploser.
- Évitez d'écraser et d'incinérer la batterie ou de la soumettre à des actions similaires.
- Ne jetez pas la batterie au feu ou dans un compresseur à déchets. Consultez la section sur l'élimination de la batterie pour obtenir des instructions.
- Ne tentez pas de démonter la batterie.
- Débranchez le chargeur de la prise avant de procéder à tout nettoyage ou entretien de routine.
- La batterie peut fuir si elle est soumise à des conditions extrêmes. Si tétélectrolyte entre en contact avec votre peau, lavez aussitôt les parties touchées avec de l'eau et du savon. En cas de contact avec les yeux, rincez immédiatement ces derniers à l'eau propre pendant au moins 15 minutes et consultez un médecin sans attendre.
- Utilisez uniquement le chargeur spécifié pour recharger.
- Ne tentez pas de court-circuiter la batterie ou les bornes du chargeur.
- Le chargeur est conçu pour être utilisé à l'intérieur seulement. Assurez-vous de toujours conserver la batterie et le chargeur dans un endroit sec.
- Éloignez cet appareil dès la fin de son utilisation pour éviter les trébuchements.
- MISE EN GARDE : N'utilisez pas l'aspirateur pour toiletter un animal.

#### AVERTISSEMENT RELATIF À L'ÉLIMINATION DES BATTERIES : RISQUE D'EXPLOSION OU D'EXPOSITION À DES MATIÈRES TOXIQUES. 1-800-822-8337

MISE EN GARDE : La batterie utilisée dans cet appareil peut présenter un risque d'incendie ou de brûlure chimique si elle n'est pas manipulée adéquatement. Ne la démontrez pas, ne la chauffez pas au-delà de la température maximale établie par le fabricant (60 °C/140 °F) et ne l'incinerez pas. Jetez rapidement toute batterie usagée. Gardez la batterie hors de la portée des enfants. Ne démontez pas la batterie et ne la jetez pas au feu. Ne tentez pas de démonter la batterie ou de retirer tout composant en saillie des bornes de la batterie. Ne tentez pas de remplacer des pièces de la batterie ou du chargeur. Cela pourrait provoquer un incendie ou une explosion. Avant de jeter la batterie, protégez les bornes exposées à l'aide d'un épais ruban isolant pour éviter les courts-circuits.

BATTERIE AU LITHIUM-ION La batterie doit être recueillie, recyclée ou éliminée dans le respect de l'environnement. Le seuil de recyclage des batteries au lithium-ion de la RBRC certifié par l'EPA indique que Technic Industries, société affiliée à Dirt Devil, participe volontairement à un programme de collecte et de recyclage des batteries usagées au Canada et aux États-Unis. Le programme de recyclage de la RBRC offre une solution de rechange pratique qui permet d'éviter que les batteries au lithium-ion soient jetées à la poubelle ou dans les ordures ménagères municipales, ce qui pourrait être illégal dans de plus amples sur les indications et les restrictions relatives à l'élimination de ces batteries dans votre région. La participation de Dirt Devil à ce programme témoigne de son engagement à protéger l'environnement et les ressources naturelles, nos ressources naturelles.